



NOTE : NO ELECTRICAL COMMAND - VALVE IS HPR  
ELECTRICAL COMMAND - HPS PILOT CONNECTS