



NO COMMAND - VALVE FULLY OPEN
ELECTRIC COMMAND - VALVE GOES
INTO PRESSURE SUSTAINING MODE