


SCREENGUARD™

AUTOMATIC VERTICAL SCREEN FILTER

INSTALLATION AND USER MANUAL

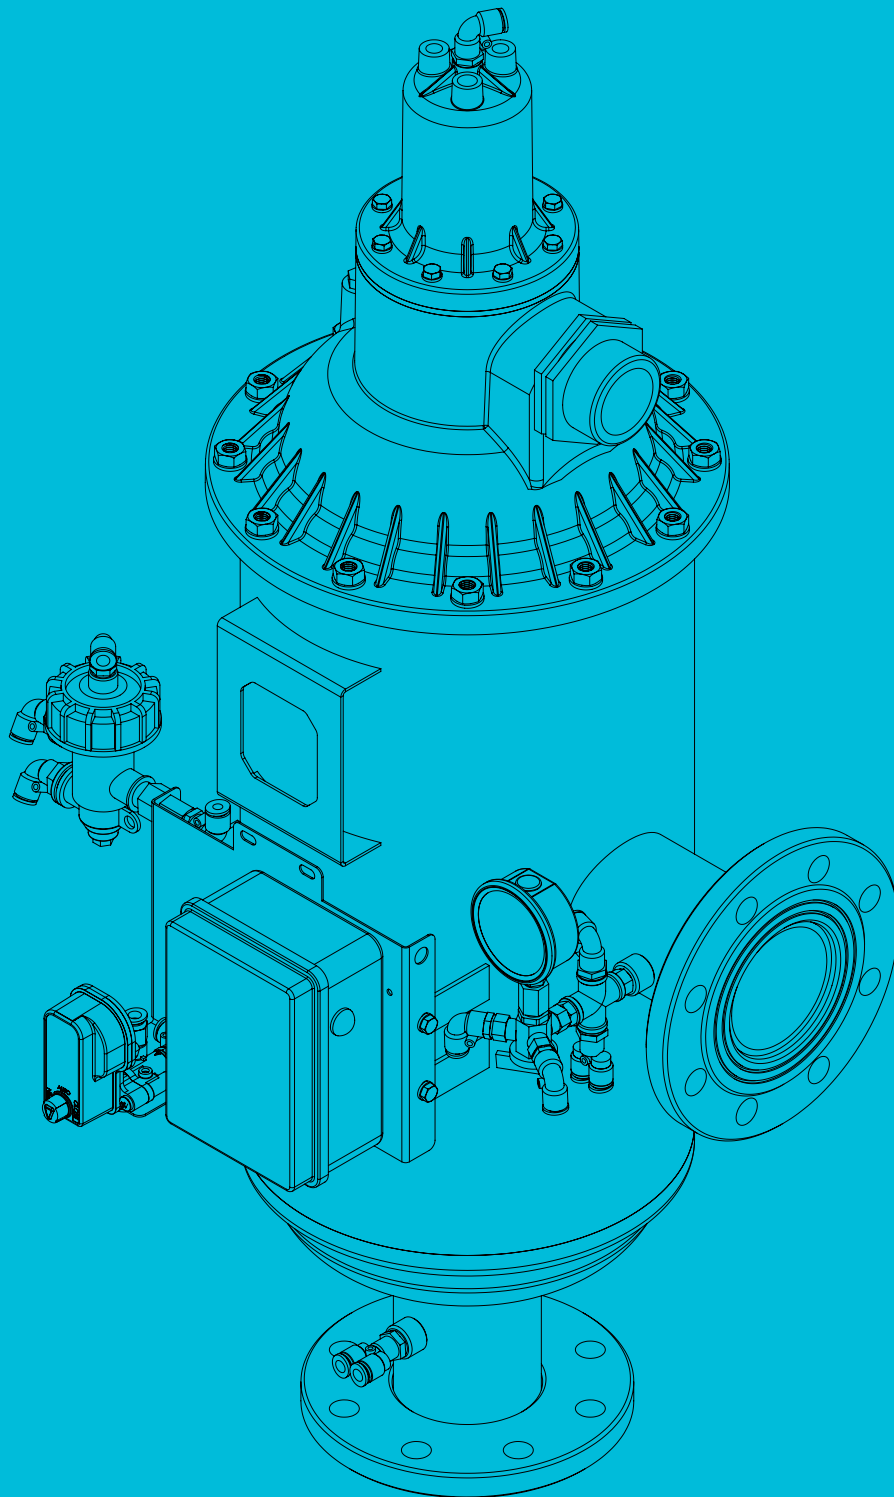

© COPYRIGHT 2024, NETAFIM™

NO PARTS OF THIS PUBLICATION MAY BE REPRODUCED, STORED IN AN AUTOMATED DATA FILE OR MADE PUBLIC IN ANY FORM OR BY ANY MEANS, WHETHER ELECTRONIC, MECHANICAL, BY PHOTOCOPYING, RECORDING OR IN ANY OTHER MANNER WITHOUT PRIOR WRITTEN PERMISSION OF THE PUBLISHER.

ALTHOUGH NETAFIM™ TAKES THE GREATEST POSSIBLE CARE IN DESIGNING AND PRODUCING BOTH ITS PRODUCTS AND THE ASSOCIATED DOCUMENTATION, THEY MAY STILL INCLUDE FAULTS.

NETAFIM™ WILL NOT ACCEPT RESPONSIBILITY FOR DAMAGE RESULTING FROM THE USE OF NETAFIM'S PRODUCTS OR THE USE OF THIS MANUAL.

NETAFIM™ RESERVES THE RIGHT TO MAKE CHANGES AND IMPROVEMENTS TO ITS PRODUCTS AND/OR THE ASSOCIATED DOCUMENTATION WITHOUT PRIOR NOTICE.



FOREIGN LANGUAGES

In the event that you are reading this manual in a language other than the English language, you acknowledge and agree that the English language version shall prevail in case of inconsistency or contradiction in interpretation or translation.

CONTENTS

Introduction

| | |
|----------------------|---|
| Aim of this manual | 4 |
| General instructions | 4 |
| Contact for support | 4 |
| Safety instructions | 5 |

Description

| | |
|--|----|
| Filter selection | 6 |
| Components and structure | 6 |
| Filter operation - general description | 7 |
| Dimensions | 8 |
| Connection diameter | 9 |
| Weights | 9 |
| Head loss | 9 |
| SG Plus Smart Bluetooth flush controller | 9 |
| Control tubes | 12 |

Installation

| | |
|--|----|
| Pre-installation preparations | 13 |
| Tools required for installation | 13 |
| Unpacking and placement | 13 |
| Hydraulic installation | 14 |
| Bluetooth flush controller activation | 15 |
| Orientation of the controller assembly | 16 |
| External power supply (optional) | 17 |

Initial operation

| | |
|-----------------------|----|
| Preparations | 18 |
| First operation | 18 |
| Application operation | 19 |

Maintenance

| | |
|-------------------------------------|----|
| Safety instructions | 25 |
| Tools required for maintenance | 25 |
| Maintenance schedule | 25 |
| Screen assembly cleaning | 26 |
| Replacing the batteries | 27 |
| Paint retouching on the filter body | 28 |
| Algae growth control | 28 |
| Winterization | 29 |

Troubleshooting

| | |
|---|----|
| General malfunctions | 30 |
| Filter body opening and screen assembly extraction | 31 |
| Flushing-nozzle replacement | 31 |
| Piston-gasket replacement | 32 |
| Piston seal replacement | 32 |
| Turbine brass bearing replacement | 33 |
| Coarse screen w/bearing replacement | 33 |
| Control tube fast connector | 33 |
| Aquative solenoid replacement | 34 |
| PD sensor unit replacement | 35 |

Replacement parts

| | |
|-------------|----|
| Filters | 37 |
| Spare parts | 38 |

Warranty

45

INTRODUCTION

Aim of this manual

This document is the user-manual of the Netafim™ ScreenGuard™ vertical hydraulically controlled automatic screen filter series. It describes the installation, operation, maintenance and troubleshooting procedures of the filters.

General

Netafim™ congratulates you on purchasing the ScreenGuard™ self-cleaning filter. This filter is part of the wide family of filters produced and supplied by Netafim™ for agriculture, municipal water and sewage systems, and all types of industrial applications. All products manufactured by Netafim™ are easy to install, use and service and don't require special skills to operate them.

The ScreenGuard™ self-cleaning filter enables high quality filtration from various types of fluid sources such as sewage, reservoirs, rivers, lakes, and wells.

Contact for support

This manual offers a full explanation of the the installation, operation, maintenance and troubleshooting procedures of the ScreenGuard™ vertical filter. However, in any case you need additional support, contact your Netafim™ local representative.

SAFETY

Safety instructions

General

- Carefully read the installation and operation instructions prior to installation or handling of the filter.
- While working with the filter all conventional safety instructions should be observed in order to avoid danger to the workers, the public or to property in the vicinity.



WARNING

Fully release the pressure in the filter before performing installation or maintenance operations involving opening the filter. Check the pressure gauge to be sure it is at 0 before proceeding.



WARNING

The filter may start a flushing cycle automatically at any time, without any prior indication.

- No changes or modifications to the equipment are permitted without written consent provided by the manufacturer or by its representative, on the manufacturer's behalf.
- Work only with proper and standard tools.
(see [Tools required for installation](#), page 13; and [Tools required for maintenance](#), page 25).
- Use only original parts supplied/approved by Netafim™.

Operation, Control and Maintenance

- Loosening or unscrewing bolts should be done only after the pressure in the filter has been released.
- Avoid splashing and water leakage in order to reduce danger of slipping, electrical danger or damage to the equipment caused by moisture.
- Always open and close valves gradually to prevent water-hammer.
- Remove grease and fat material residues to avoid slipping.
- Manual cleaning of filter assembly using high water pressure should be performed in accordance with the cleaning system instructions and without endangering the operator or his working area.
- When using acid or other chemical agents for the maintenance of the irrigation system or for the cleaning of filter assembly, it should be performed in accordance with the relevant material safety instructions and without endangering the operator or his working area.

DESCRIPTION

Automatic vertical screen filter selection

Netafim™ offers a selection of ScreenGuard™ automatic, vertical screen filters to fit any filtration requirement:

| Model | Description | Filtration area (cm ²) | Max. Operating pressure (bar/PSI) | Max. recommended flow rate (m ³ /h) | Min. backflush pressure (bar/PSI) | Backflush flow rate (m ³ /h) |
|-----------|-------------|------------------------------------|-----------------------------------|--|-----------------------------------|---|
| SG V 2" | 2" | 1,350 | 10/150 | 25 | 2/30 | 12 |
| SG V 3" | 3" | 1,350 | 10/150 | 35 | 2/30 | 12 |
| SG V 3" S | 3" Super | 2,000 | 10/150 | 50 | 2/30 | 18 |
| SG V 4" | 4" | 2,000 | 10/150 | 75 | 2/30 | 18 |
| SG V 4" S | 4" Super | 2,700 | 10/150 | 85 | 2/30 | 12 |
| SG V 6" | 6" | 2,700 | 10/150 | 150 | 2/30 | 12 |




NOTE

- 2" and 3" vertical filter models are available with NPT or BSP threads.
- 3", 4" and 6" vertical filter models are available with BSTD, ANSI, ISO10 or ISO16 flanges.
- All filter models are available with 100, 130, 200, 300 or 500 micron (150, 115, 80, 50 or 35 mesh) filtration grade. (Other filtration grades are available upon request).

Components and structure

A ScreenGuard™ automatic vertical screen filter is comprised of the following components:

1. Inlet
2. Outlet
3. Hydraulic piston
4. Hydraulic flushing turbine chamber
5. Hydraulic flushing turbine
6. Fine screen assembly
7. Flat strainer
8. Flush controller
9. Aquative operator (solenoid)
10. Suction assembly
11. Suction nozzle
12. Pressure gauge
13. Drain port
14. Flushing valve
15. Hydraulic relay

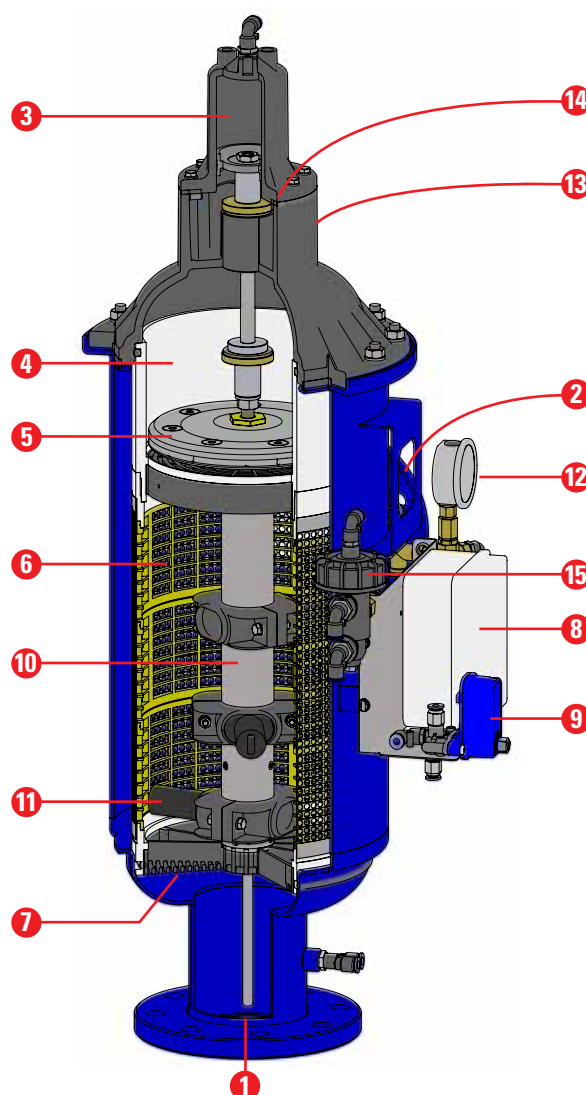

DESCRIPTION

Filter Operation - General Description

The Filtration Process

Water enters the filter through the inlet [1] and passes through the flat strainer [7]. The flat strainer is designed to protect the cleaning mechanism from large dirt particles (The flat strainer is not cleaned automatically).

The water then flows through the screen filter [6] from the inside out to the outlet [2]. The entrapped particles form a "filtration cake" which accumulates on the screen inner surface. Over time the "cake" build-up increases the pressure differential across the screen, and at a pre-set value (0.5 bar; 7 PSI) the automatic self-cleaning cycle begins.

The Self-Cleaning Process

The self-cleaning process utilizes the backflush technique to effectively remove the dirt particles from the screen. The automatic flushing cycle takes 10-30 seconds and does not interrupt the supply of process water.

As water flows from the inlet through the flat strainer and screen to the outlet, at a pre-set pressure differential (0.5 bar; 7 PSI) the flush controller [8] activates the hydraulic piston [3] and opens the flushing valve [14].

The pressure in the hydraulic flushing turbine [5] chamber drops, creating suction at the flushing nozzle [11] tips. The water and particles passing through the hydraulic flushing turbine cause the suction assembly [10] to rotate, while the hydraulic piston [3] moves the suction assembly in an axial motion to the opposite end of the filter. The combination of rotational and axial motion of the suction assembly ensures that the suction nozzles sweep the entire inner surface of the screen.

When the first backflush stroke is completed, the flushing valve [14] closes and after a very short interval the second backflush stroke is hydraulically triggered and the flushing valve reopens. The suction assembly [10] rotates, moving with the piston in the opposite direction and returning to its original position.

The ScreenGuard™ screen filter series are hydraulically operated units. No external power source is required. This type of control enables operation at remote installation sites.


DESCRIPTION

Dimensions

External dimensions and inlet and outlet locations [mm]:

Front view

Side view

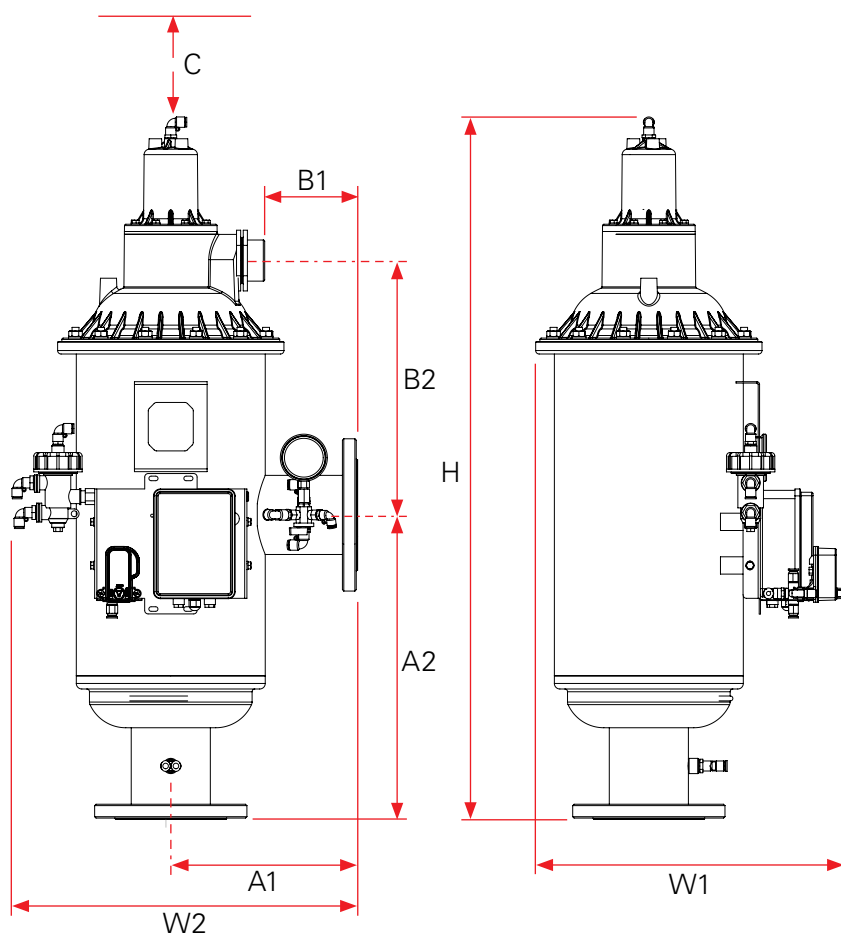

| Model | External dimensions | | | Inlet and outlet location | | Clearance for maintenance [C] |
|-----------|---------------------|--------------|--------------|---------------------------|------------------------|-------------------------------|
| | Height [H] | Width 1 [W1] | Width 2 [W2] | Inlet to outlet | Outlet to drain | |
| SG V 2" | 925 | 455 | 500 | H [A1] 270, V [A2] 390 | H [B1] 130, V [B2] 318 | 600 |
| SG V 3" | 925 | 455 | 500 | H [A1] 270, V [A2] 390 | H [B1] 130, V [B2] 318 | 600 |
| SG V 3" S | 1025 | 455 | 500 | H [A1] 270, V [A2] 440 | H [B1] 130, V [B2] 368 | 700 |
| SG V 4" | 1025 | 455 | 500 | H [A1] 270, V [A2] 440 | H [B1] 130, V [B2] 368 | 700 |
| SG V 4" S | 1430 | 455 | 500 | H [A1] 270, V [A2] 620 | H [B1] 135, V [B2] 475 | 1000 |
| SG V 6" | 1430 | 455 | 500 | H [A1] 270, V [A2] 620 | H [B1] 135, V [B2] 475 | 1000 |

Box dimensions

| Model | Height [H] | Width 1 [W1] | Width 2 [W2] |
|-----------|------------|--------------|--------------|
| SG V 2" | 1,070 | 660 | 520 |
| SG V 3" | 1,070 | 660 | 520 |
| SG V 3" S | 1,070 | 660 | 520 |

| Model | Height [H] | Width 1 [W1] | Width 2 [W2] |
|-----------|------------|--------------|--------------|
| SG V 4" | 1,070 | 660 | 520 |
| SG V 4" S | 1,430 | 550 | 550 |
| SG V 6" | 1,430 | 550 | 550 |

DESCRIPTION

Connection diameter


| Model | Inlet/outlet connection diameter | Backflush connection diameter |
|------------|----------------------------------|-------------------------------|
| SG V 2" T | 2" | 50mm |
| SG V 3" T | 3" | |
| SG V 3" F | 3" | |
| SG V 3" ST | 3" | |
| SG V 3" SF | 3" | |
| SG V 4" F | 4" | |
| SG V 4" SF | 4" | |
| SG V 6" | 6" | |

Weights

| Model | Gross weight (Kg) | Box Weight (with filter) (Kg) |
|------------|-------------------|-------------------------------|
| SG V 2" T | 30 | 44 |
| SG V 3" T | 30 | 42 |
| SG V 3" F | 36 | 50 |
| SG V 3" ST | 34 | 48 |
| SG V 3" SF | 40 | 54 |
| SG V 4" F | 42 | 56 |
| SG V 4" SF | 62 | 76 |
| SG V 6" | 66 | 81 |

The weights in the tables above are order of magnitude only - final data are issued with the product order.

Head loss (clean filter)

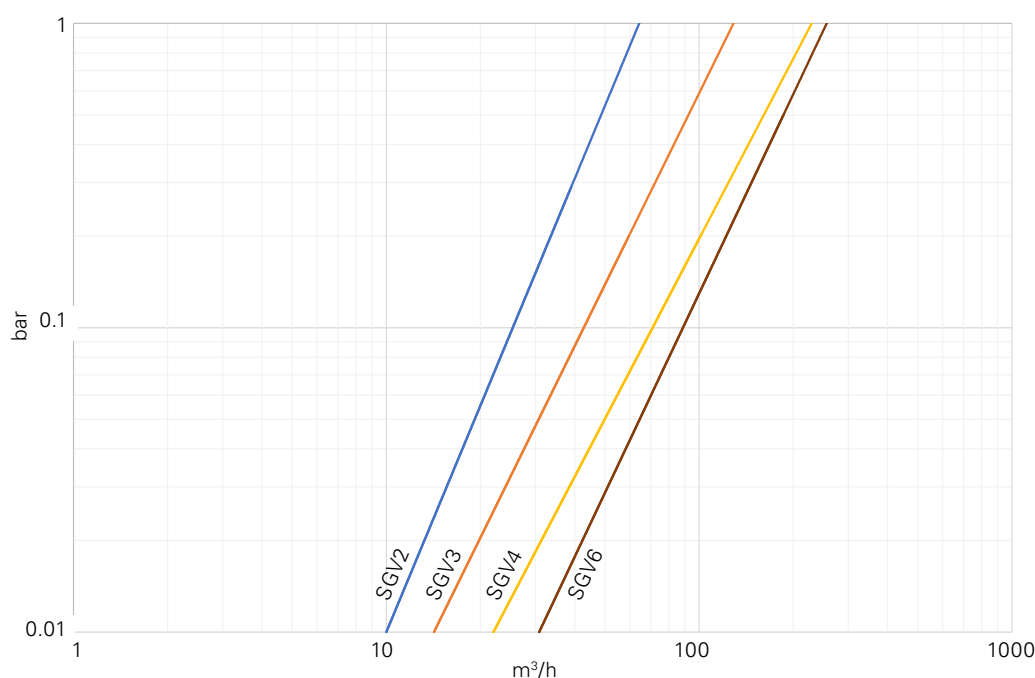

SG Plus Smart Bluetooth flush controller

New hardware and UI design, professional properties, and high reliability make the SG Plus the most efficient solution for the management of the SG filter.

The SG Plus features 3 outputs enabling various operations:

- Controlling 3 different filters.
- Controlling the main valve:
 - In case that during flushing the system pressure decreases below the minimum allowed pressure (2 Bar), a downstream valve may be required.
 - The downstream valve shuts down before the filter flushes, diverting the full pump pressure to flushing during the flush action.
 - Once the flushing operation has ended – the valve re-opens and the irrigation proceeds.
- Setting an external device (signal, SMS, Alarm, etc.) during the flushing operation.

DESCRIPTION

Main features

PD based flushing cycle activation

The controller monitors the pressure differential between the inlet and outlet by means of a PD sensor and triggers flushing cycles accordingly.

Manual flushing cycle activation

An external START button enables manual activation of a flushing cycle.

Endless looping detection

The SG controller monitors the number of consecutive flushing cycles triggered by the PD sensor before deciding that there is an endless looping problem. The options are: 1-10 or "no," ignore the looping problem.

Smartphone application

Feature a user-friendly Smartphone application that communicates with the controller via Bluetooth (10 meter range of the controller!)

The application allows:

- Monitoring all the parameters of the filter's activity
- Reviewing the filter activity history
- Setting operational parameters: PD (pressure differential), PD delay, Flushing interval and operation mode
- Starting a flushing cycle
- Monitoring battery state

The application interfaces with multiple SG Plus controllers, allowing monitor and control of many filters.

The flush controller does not require any adjustment, it is entirely factory adjusted for best operation.

- PD (pressure-differential) is set to 5 meters (0.5 bar)
- PD delay is set to 5 seconds
- Flushing interval is set to 4 hours
- The operation mode is set to Time & PD

Batteries

The controller is powered by 4 x 1.5v C-size alkaline batteries (not supplied).



NOTE

If electricity is available at the filter location, the flush controller can be powered by an external 100-240v AC to 5v DC power supply (not supplied). (see [page 17](#))




WARNING

When operating the controller with the external power supply, make sure that the battery compartment is not inside the flush controller (its loose wire ends could cause short-circuit).




DESCRIPTION

Main parts

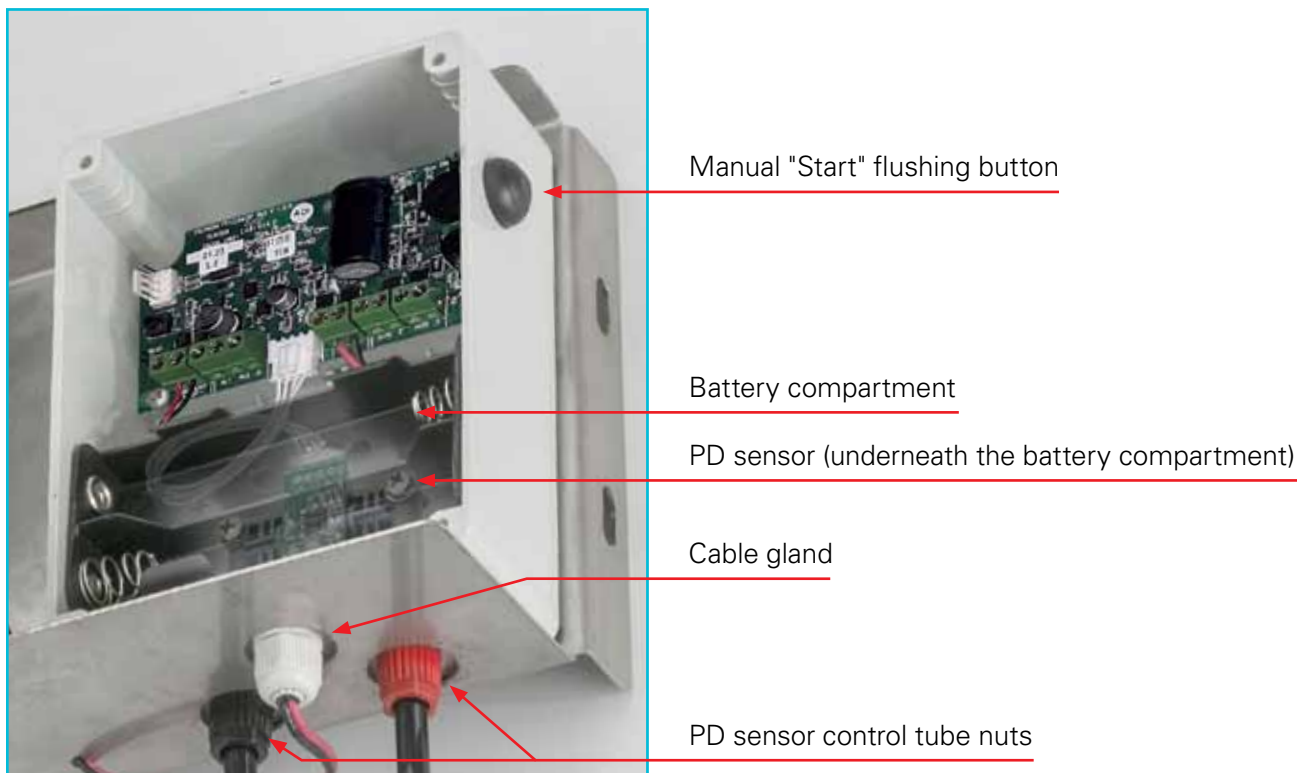


Wiring

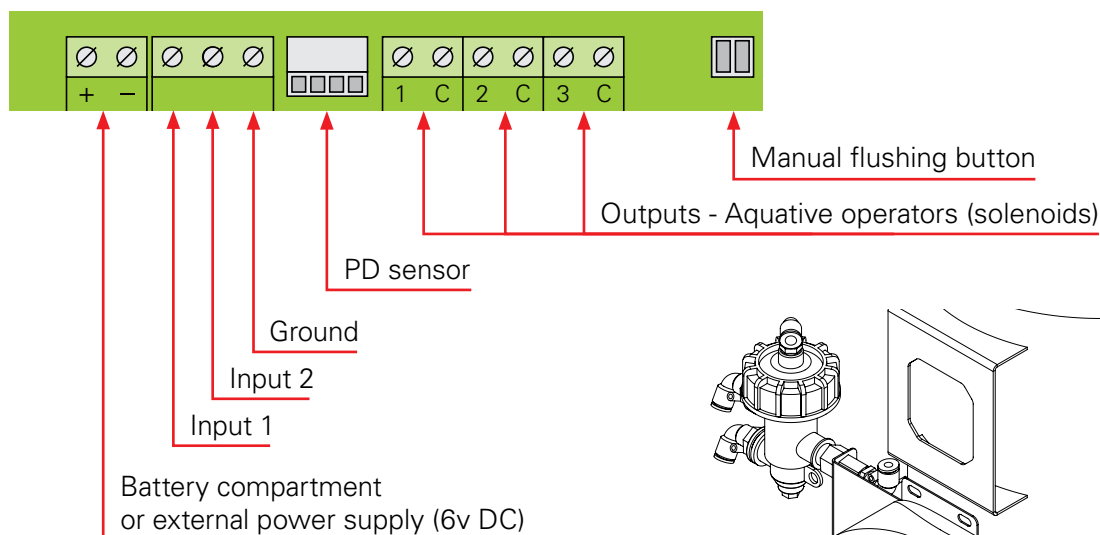

Option: Filtron 1-10 flush controller

Optionally, SG filters can be supplied equipped with the Filtron 1-10 flush controller for additional control features.

For operation of the Filtron 1-10 flush controller see its User Manual enclosed with it.

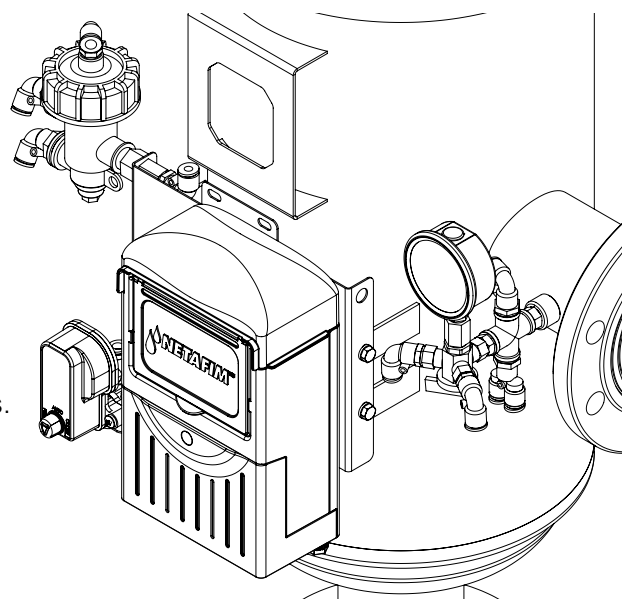

DESCRIPTION


Control tubes

The PE 8 mm command tubes are factory-installed and do not require any intervention during installation of the filter.

The control-tube connection scheme below is to be used as reference while troubleshooting the filter.

Legend

- a.** From the filter inlet pressure point to the pressure gauge 3-way valve.
- b.** From the filter inlet pressure point to the flush controller PD sensor high-pressure connection port (right).
- c.** From the Aquative solenoid to the pressure gauge 3-way valve.
- d.** From the hydraulic relay to the pressure gauge 3-way valve.
- e.** From the hydraulic relay to the Aquative solenoid inlet.
- f.** From the hydraulic relay to the filter hydraulic piston cap.
- g.** From the pressure gauge 3-way valve to the flush controller PD sensor low-pressure connection port (left).
- h.** Drain tube (no more than 2 meter long each).

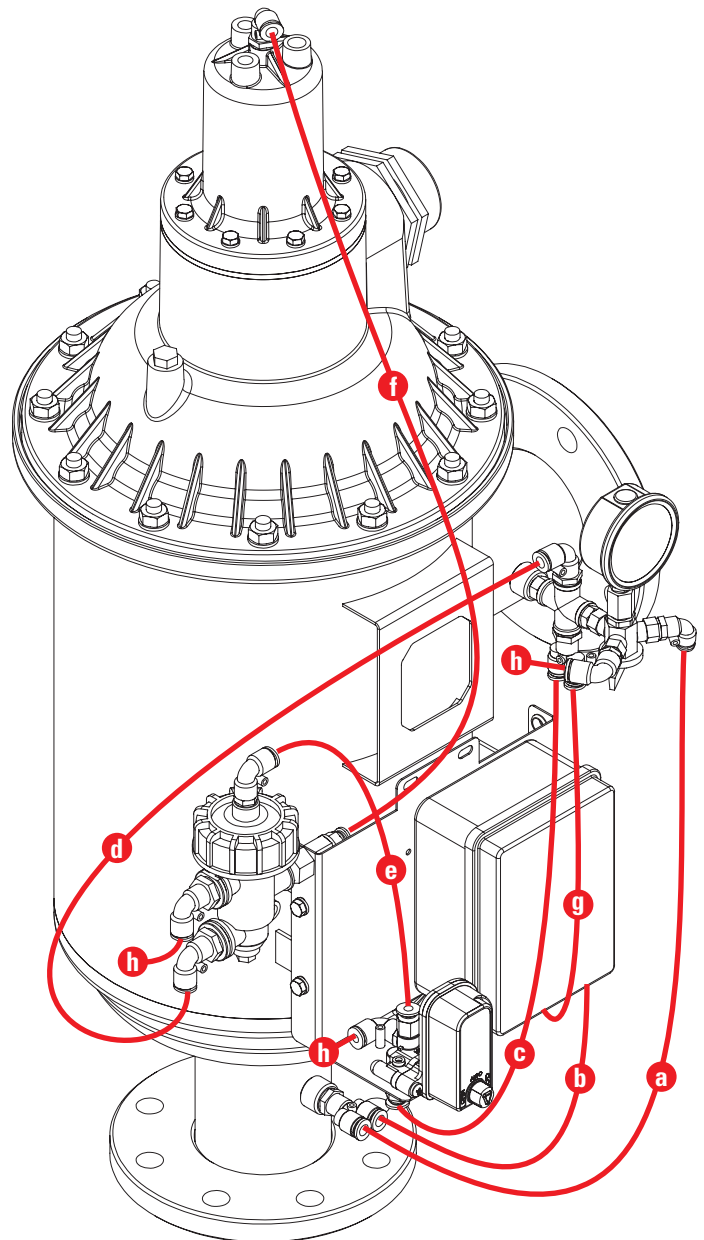

INSTALLATION

Pre-installation preparations

Design Recommendations

- If a long pipeline fill time causes a temporary high flow and low pressure situation, it is recommended to install a pressure-sustaining valve (PSV) downstream from the filter. The PSV will ensure a controlled fill-up of the line.
- It is highly recommended to install isolation valves upstream and downstream from the filter for maintenance and troubleshooting purposes.
- It is highly recommended to install a pressure reducing valve (PRV) downstream from the filter.
- It is highly recommended to install a mechanical non-return valve downstream of the filter to prevent backflow damage to the screen.
- Make sure that the filter location offers sufficient clearance to remove the cover assembly and the screen assembly from the filter for troubleshooting (see [page 8](#)).
- Avoid placing the flush pipe on a rising slope to prevent backpressure.
- Minimum flush pipe diameter: 2".

Preparations for Installation

- Prepare the inlet and outlet pipes according to the dimensions and type of connection (thread/flange) of your filter (see [page 9](#)).
- Ensure suitable lighting at the area of the filter to enable good visibility and safe maintenance.
- Arrange suitable platforms and safety barriers to enable easy, safe access to the filter.
- Allow a convenient access and adequate space around the filter for dismantling and maintenance.

Tools required for installation

- Crosshead screwdriver
- Spanners

| Flange size | Bolt and nut size | Wrench size |
|-------------|-------------------|-------------|
| up to 8" | 5/8" (17mm) | 15/16" |

Unpacking and placement

- Open the cardboard package and remove it from the wooden pallet.
- Support the filter manually.



ATTENTION

Note the filter weight before operation and follow the safety instructions.

- Detach the filter from the wooden pallet.

INSTALLATION

Hydraulic installation



ATTENTION


The inlet pipe should be of a diameter equal to or larger than the filter inlet diameter.
Never connect a the SG filter to an inlet pipe of a diameter smaller than the filter inlet diameter.

- Ensure the direction of flow is according to the arrows marked on the filter inlet and outlet.
- Threaded models: Apply Teflon tape to the threads.
- Flanged models: Place gaskets on the inlet and outlet flanges (B).
- Position the filter in place.
- Threaded models: Tighten the inlet and outlet connectors.
- Flanged models: Fasten the inlet and outlet flanges bolts.
- Connect a pipe (C) to the flush port (D).
Minimum flush pipe diameter: 2".
Maximum flush pipe length: 10 m.
Water should be allowed to flow to the atmosphere freely from the flush pipe.
- Secure the open end of the flush pipe to prevent movement during the flushing cycle.
- Avoid placing the flush pipe on a rising slope to prevent backpressure.



ATTENTION

If a PRV is required in order to protect the irrigation system, it is highly recommended to install it downstream of the filter.

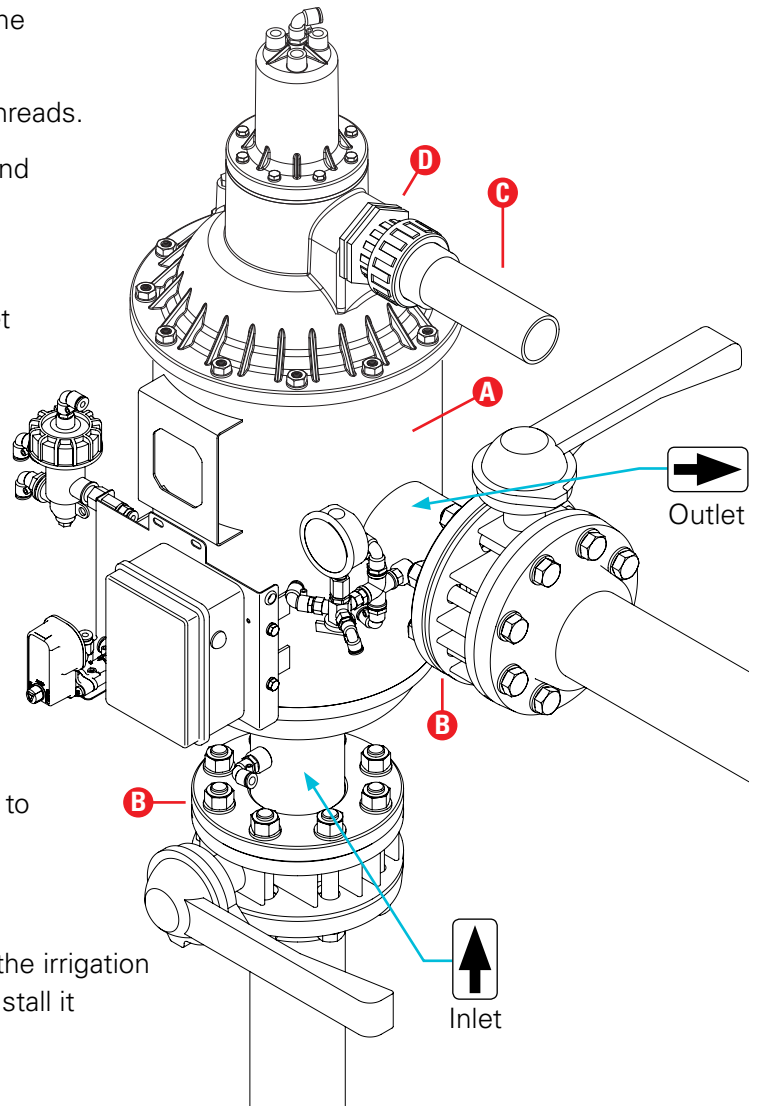

INSTALLATION

Bluetooth flush controller activation

Insert batteries into the Bluetooth flush controller



NOTE

Always use a whole set of 4 new batteries. Never use new and old batteries together.


1. Open the flush controller box using a cross-head screwdriver.



The controller should turn on automatically.
3 short beeps followed by a long one should be heard.



2. Insert a set of 4 new batteries (Match the poles to the markings inside the battery housing).
3. Close the flush controller box (mind the alignment of the cover gasket to ensure sealing).

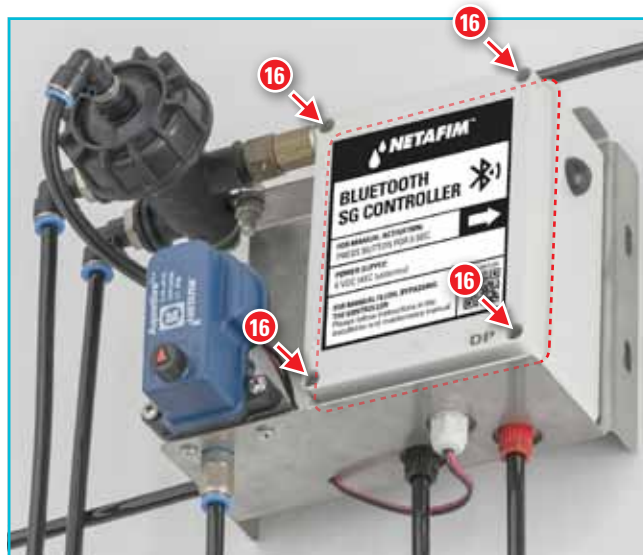

If your SG filter is equipped with the Filtron 1-10 flush controller, see its User Manual enclosed with it.

INSTALLATION

Download the SG filter application to your Smartphone

1. Scan the QR code (also on the flush controller) or download it from the appropriate app store and install it.

Notice that there are two application versions.

- For Android - On Google play
- For iOS - On Apple store



2. Follow the on-screen instructions.



TIP

After the installation, it is recommended to create a shortcut on your Home screen.

Link the SG filter application to the filter flush controller


Enter the SG Plus Smartphone application and select your filter (BT pairing is automatic).

Scan the QR code on the flush controller to enter the user manual.


Orientation of the controller assembly

The SGV filter is typically designed for vertical installation. However, in case it is required it can be installed horizontally. In such case the controller assembly can be rotated 90° as to remain vertical for practicality and comfort of use.

Horizontal installation

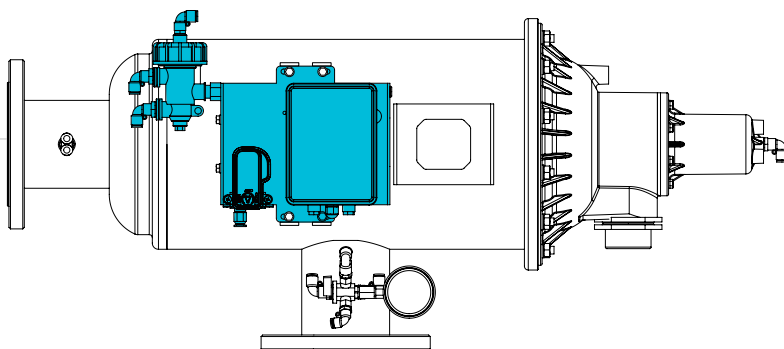

Vertical installation

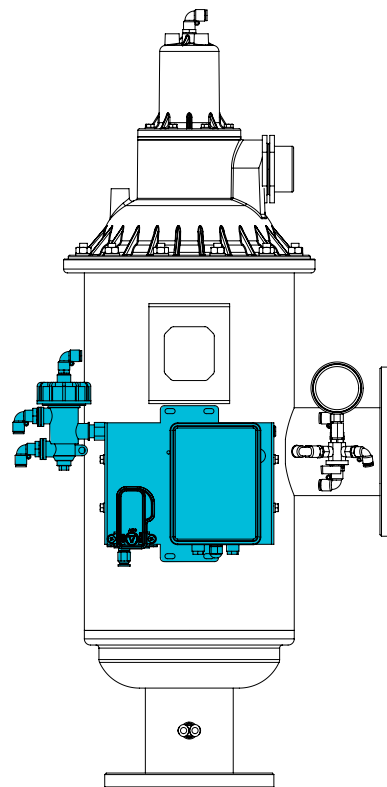

Required action to perform the controller rotation:


1. Mark each 8mm control tube source (High pressure, Low pressure, Piston).
2. Disconnect the 8mm control tubes the link the controller to the filter (High pressure, Low pressure, Piston).
3. Unscrew the 4 X 10mm screws that connect the controller support bracket to its supports.
4. Rotate the bracket 90° (with all the components assembled to it).
5. Connect the 4 X 10mm screws to the support.
6. Reconnect the 8 mm control tubes to the correct locations – mind the identity of the connections!

INSTALLATION


Power the flush controller by an external power supply

If electricity is available at the filter location, the flush controller can be powered by an external 100-240v AC to 5v DC power supply (not supplied).

1. Open the flush controller box using a cross-head screwdriver.

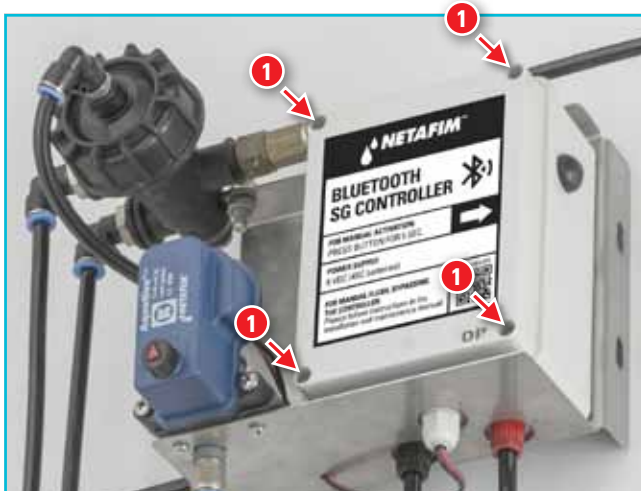


2. Disconnect the battery compartment wires from the terminal block using a flat-head screwdriver.
3. Remove the battery compartment and keep it separately for possible future use.
4. Loosen the cable gland nut by hand.

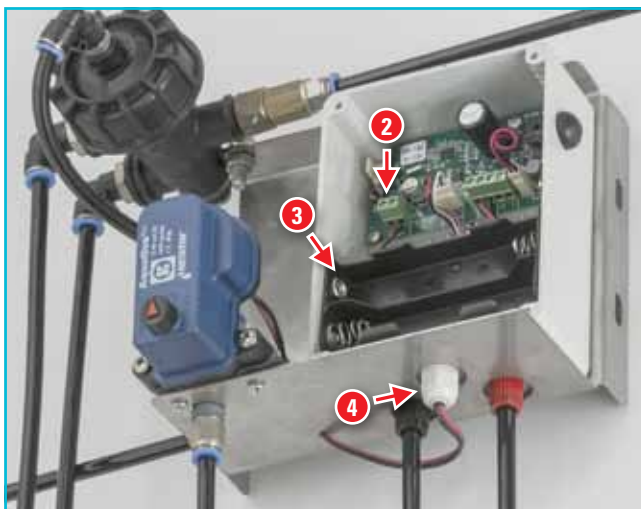


WARNING

When operating the controller with the external power supply, make sure that the battery compartment is not inside the flush controller (its exposed wire ends could cause short-circuit).

5. Gently thread the power supply wires through the cable gland.
6. Connect the power supply wires to the terminal block (mind polarity).
7. Refasten the cable gland nut by hand.
8. Plug the power supply to the mains and make sure the flush controller turns on.

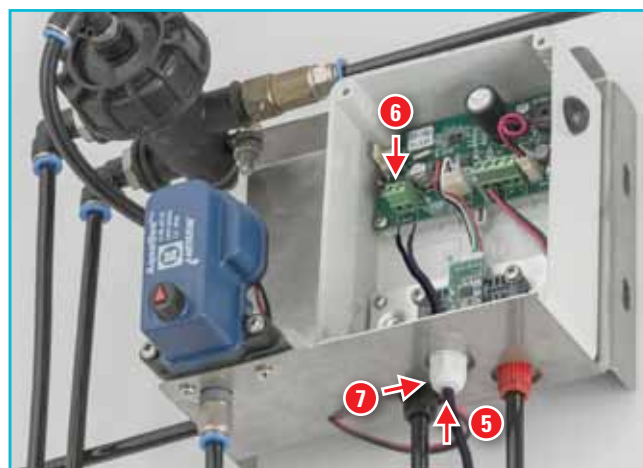

9. Close the flush controller box (mind the alignment of the cover gasket to ensure sealing).

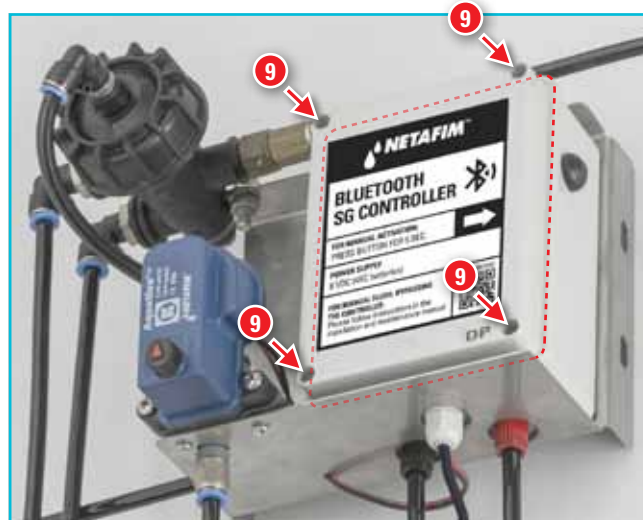


If your SG filter is equipped with the Filtron 1-10 flush controller, see its User Manual enclosed with it.

INITIAL OPERATION

Preparations

Before activating the filter for the first time, go through the following check-list carefully (No special training is required to carry out these activities).


- Check that the filter is mounted in the correct flow direction.
- Check that all nuts and bolts are firmly tighten.
- Check that all the command tubes are connected properly and that all connections are tight (see [page 12](#)).
- Ensure the filter is well supported and stable.
- Check that the Aquative operator (solenoid) selector is turned to the AUTO position.
- Make sure that the flush pipe is installed in conformity with the specifications (see [Hydraulic installation](#), page 14).
- Make sure the controller is active by initiating a manual flush (The solenoid should click).
(To initiate a manual flush hold the MANUAL button on the flush controller pressed for 5 seconds or use the START command in the application.)

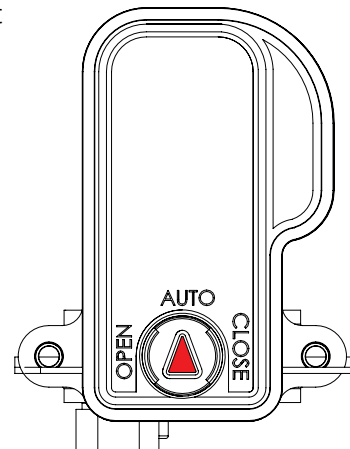

First operation

After completing the preparation check-list above, perform the following steps:

1. Slowly open the isolation valve at the filter inlet.
Water will flow into the filter.
2. Check for leaks and repair if necessary.
3. Slowly open the isolation valve at the outlet of the filter.
4. Ensure the flow through the filter does not exceed the filter's maximum flow rate (see [page 6](#)).
5. Start a manual flushing cycle.
(To initiate a manual flush hold the MANUAL button on the flush controller pressed for 5 seconds or use the START command in the application.)
6. Check the upstream pressure **during the flushing cycle**, it should not drop below 2.0 bar (30 PSI).
8. Perform 2 additional consecutive manual flushing cycles to evacuate air from the system.
9. Monitor the upstream pressure **during the flushing cycles**, it should not drop below 2.0 bar (30 PSI). If this cannot be ensured, consult Netafim™.

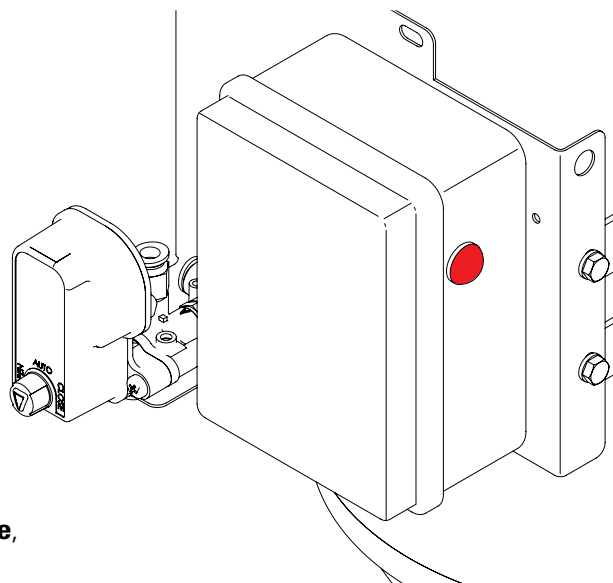

NOTE

The filter flushes in two, separate consecutive flushing cycles with a few seconds pause between them (During the pause the filter does not flush).

OPERATION

Application operation

The SG Plus Smartphone application is easy-to-use and intuitive. The following is a quick guide to the SG Plus app.

(If your SG filter is equipped with the Filtron 1-10 flush controller, see its User Manual enclosed with it).

Welcome screen

When the user taps on the app shortcut, a welcome screen appears...



Scanning result screen

The results of the controllers in the vicinity will appear on the Scanning result screen.

Select your controller.



Scanning process screen

Then, a Scanning process of the controllers in the vicinity will start.



Continued on the next page

OPERATION

Your controller home screen

This screen displays the main parameters of the filter operation:

- Operation mode
- Flushing interval
- Cycle duration
- PD set point
- Time to next flush cycle

NOTE


The SG Plus controller does not require any adjustment, it is entirely factory adjusted for best operation.

However, you can edit a parameter by pressing it.

WAIT PD - the application is acquiring PD data from the controller (wait before proceeding).


START - Press to start or stop a flushing cycle.

Battery level  BT signal strength 

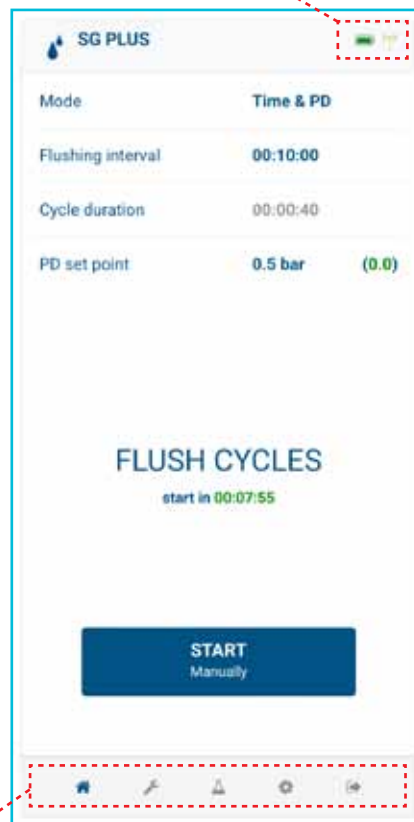

Operation mode selection screen

- Select
 - Suspended
 - PD only
 - Time and PD

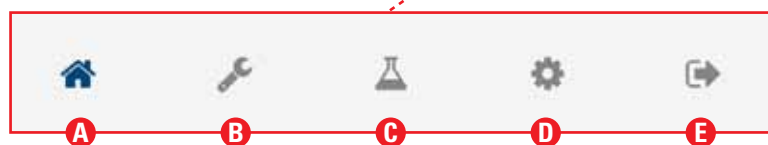

A. Home

- Mode
- Flushing interval
- Cycle duration
- PD set point
- Manual operation

B. Settings

- Output mapping
- Main valve ON/OFF
- Alarm output ON/OFF
- Number of filters
- Dwell time
- PD delay
- Looping limit
- Pressur units bar/PSI
- PD calibration
- Device name
- Sound
- Factory reset

C. Flushing log

- Based on time
- Based on pressure differential
- Manual flushings
- Clear counters

D. Preferences

- Select language
- Select font size
- Technician mode (Only Netafim qualified technicians are authorized to this section by personal password).

E. Exit the SG Plus app.

Flushing interval adjustment

Set flushing interval time



OPERATION

Cycle duration adjustment screen

Set filter flush duration



PD setpoint adjustment screen

Set PD setpoint



Settings screen

This screen displays additional parameters of the filter operation:


- PD delay (not editable)
- Looping limit
- Controller's name
- Pressure unit - bar/PSI
- Sound - ON/OFF
- PD calibration activation
- Factory reset

Press a parameter to edit it.



Dwell time screen

Set dwell time between filter flush operations

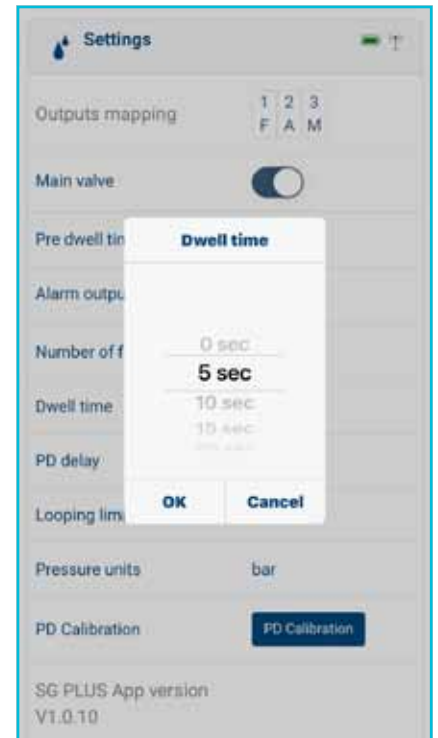

Pre dwell time screen

Only when main valve is active

Set dwell time between main valve and filter flush




Continued on the next page

OPERATION

Number of filters screen

Set number of filters (1, 2 or 3)

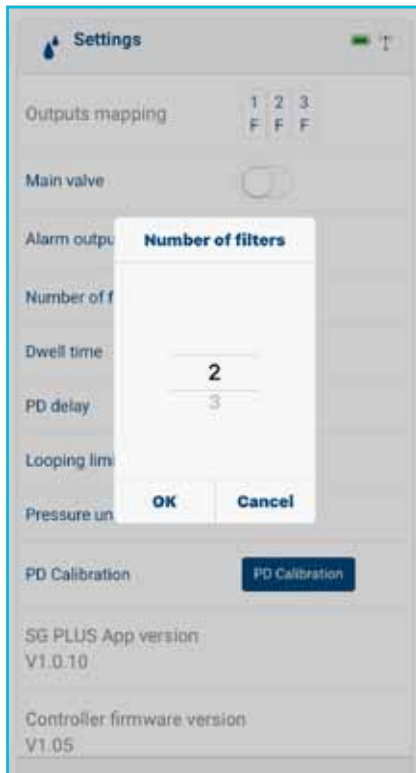

Looping limit screen

Set the number of consecutive flushing cycles triggered by the PD sensor before deciding that there is an endless looping problem.*

Enter a number - 1-10, or 0 - to ignore the looping problem.



Pressure units screen

Select the pressure unit - bar/PSI




PD delay screen

Set PD delay time



Device name screen

Name your device for future identification.

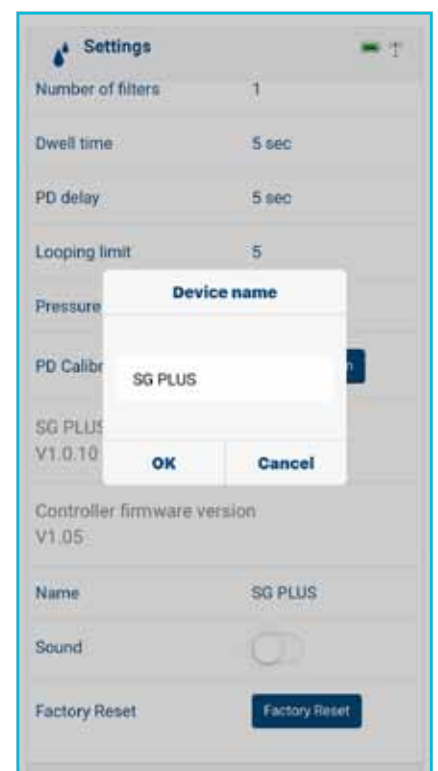

*If the looping limit is attained, the controller will cease flushing and display a looping error warning on the top right corner of the screen.

OPERATION


Your filter's Flushing log screen

This screen displays the accumulated number of flushings performed:


- Based on time
- Based on PD
- Manually triggered
- Detailed log
 - Monthly
 - Daily

This screen is not editable.

CLEAR COUNTERS - press to reset all the counters.

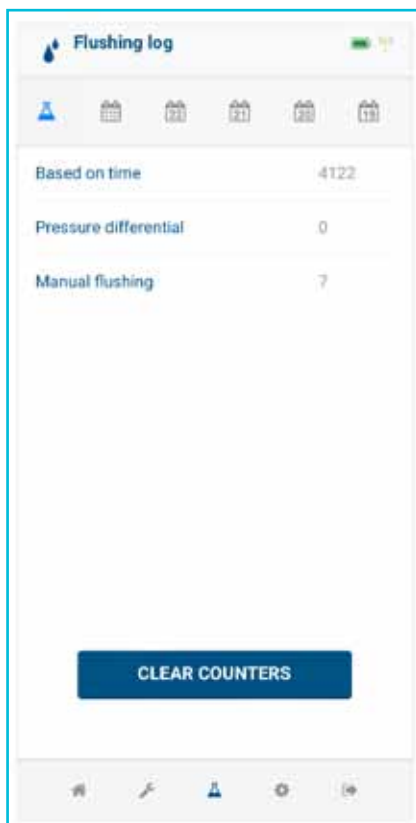

Monthly flushing log screen

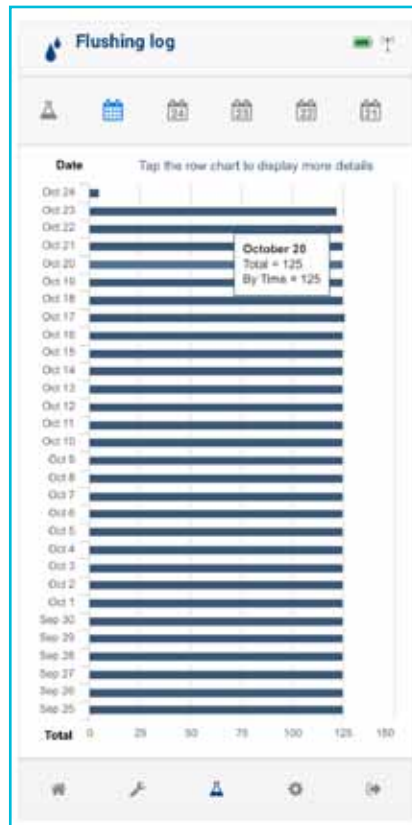

Daily flushing log screen



Preferences screen

This screen allows to select the app's UI language and font size.

Press a parameter to edit it (see the 2 next pages).

Technician mode - ON/OFF

ATTENTION

Technician mode allows modification of additional parameters.

This section is accessible only with a Netafim™ qualified technician personal password.

For assistance contact your Netafim™ local representative.




Continued on the next page

OPERATION

Select language screen

Select the app's UI language

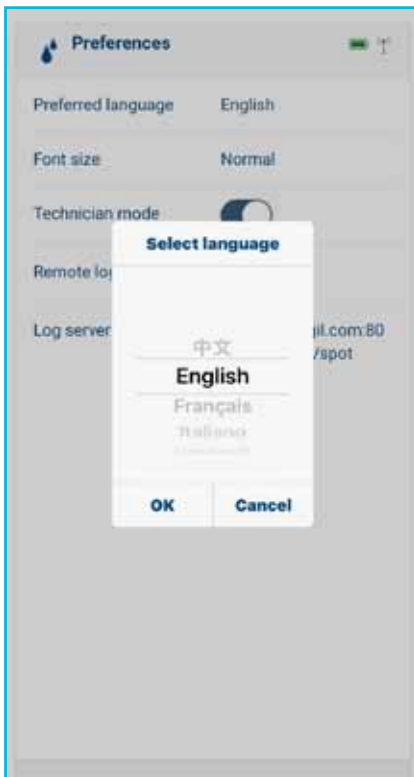

Select font size screen

Select the app's UI font size



MAINTENANCE

Safety instructions



WARNING

When under pressure, the filter may start a flushing cycle automatically at any time, without prior indication. Fully release the pressure in the filter before performing installation or maintenance operations involving opening the filter. Check the pressure gauge to be sure it is at 0 before proceeding.

Tools required for maintenance

- Spanners - 17mm for the filter body, and 10mm for the piston
- Crosshead screwdriver
- Lubrication Grease - water resistant graphite/silicone grease

Maintenance schedule

Once a week

1. Visually inspect the filter and its control apparatus for leaks. Repair if necessary.
2. Perform a manual flushing cycle.
(To initiate a manual flush hold the MANUAL button on the flush controller pressed for 5 seconds or use the START command in the application).
3. Make sure that during the flushing cycle the inlet pressure does not drop below 2.0 bar (30 PSI).
4. Make sure the filter flushes in two, separate consecutive flushing cycles with a few seconds pause between them. In case a clear pause between the two flushing cycles is not noticeable, consult Netafim.

At the end of the irrigation season

1. Close the filter's downstream (outlet) valve.
2. Immediately perform 3 consecutive manual flushing cycles.
(To initiate a manual flush hold the MANUAL button on the flush controller pressed for 5 seconds or use the START command in the application.)
3. Turn the pump off.
4. Close the filter's upstream (inlet) valve.
5. Remove the batteries from the controller (see [page 27](#)).
6. Drain the filter.
7. Visually inspect the filter's body coating for damage. Repair if necessary (see [Paint retouching on the filter body](#), page 28).

At the beginning of the irrigation season

1. Extract the fine screen assembly and clean it with pressurized fresh water (see [page 26](#)).
if the screen is dirty with hard to remove organic dirt: Perform chemical cleaning of the filter screen assembly (see [Algae growth control](#), page 28).
2. Visually inspect the gaskets. Replace if necessary.
3. Visually inspect the upper bearing. Replace if necessary.
4. Visually inspect the lower bearing. Replace if necessary.
5. Visually inspect the suction nozzles for cracks and/or other mechanical damage.
6. Apply grease to the O-rings.
7. Install new batteries in the controller (see [page 27](#)).
8. Activate the filter (see [First operation](#), page 18).
9. Perform 3 consecutive manual flushing cycles
(To initiate a manual flush hold the MANUAL button on the flush controller pressed for 5 seconds or use the START command in the application.)
10. Make sure that during the flushing cycles the inlet pressure does not drop below 2.0 bar (30 PSI).

MAINTENANCE

Screen assembly cleaning


Disassembly:

1. Unscrew nuts (A) with a 17mm wrench
2. Remove washers (B)
3. Remove Piston Cover Assembly (C) and gasket (D)
4. Pull out suction assembly (E)
5. Pull out screen assembly (F).
6. Flush screen assembly (F) with pressurized fresh water and remove dirt.

If the screen is still dirty, separate the flushing assembly from the screen assembly and flush screen assembly (F) from the inside out with pressurized water and remove remaining dirt.

Assembly:

1. Lubricate screen assembly O-rings (H).
2. Insert screen assembly (F) and push all the way.
3. Insert suction assembly (E) and push all the way.
Make sure suction assembly (E) is aligned and positioned inside the socket of the screen assembly (F), and that the main shaft (G) is lodged inside the bottom bearing.
4. Manually rotate the turbine (I). It should rotate freely.
5. Make sure gasket (D) is in place.
6. Put Piston Cover Assembly (C) in place.
7. Place washers (B) and nuts (A) and tighten the nuts.

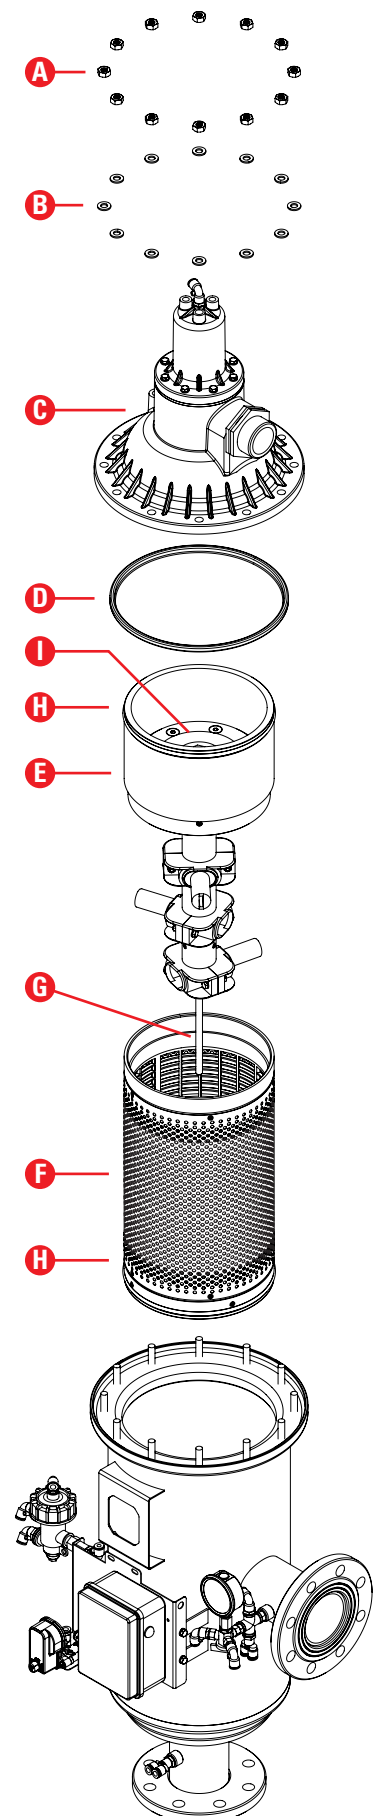

MAINTENANCE

Replacing the batteries in the Bluetooth flush controller



The controller is powered by 4 x 1.5v C-size batteries (6v DC):




NOTE

Always replace the whole set of 4 batteries. Never use new and old batteries together.

1. Open the flush controller box using a cross-head screwdriver.
4. Close the flush controller box (mind the alignment of the cover gasket to ensure sealing).

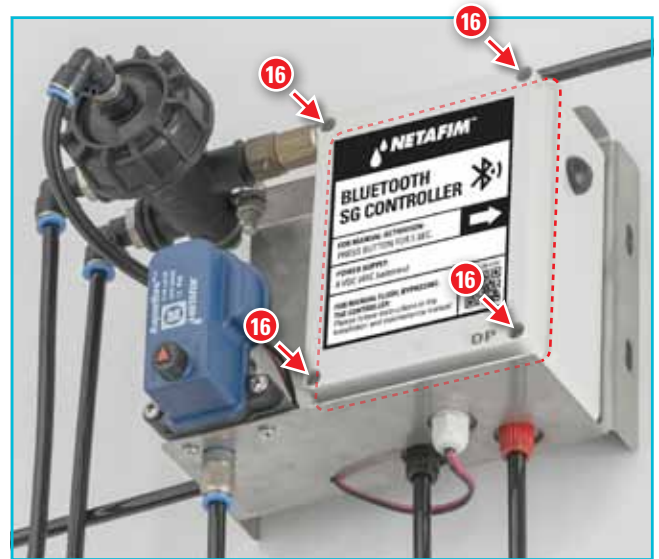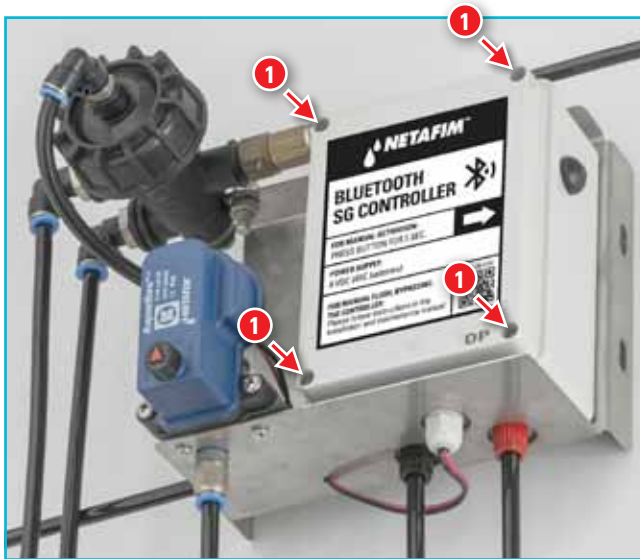

2. Extract the batteries.

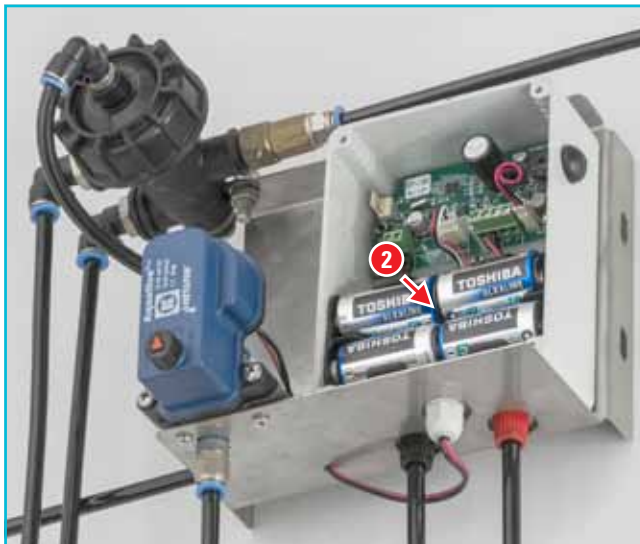

3. Insert a set of 4 new batteries (Match the poles to the markings inside the battery housing).

The controller should turn on automatically.
3 short beeps followed by a long one should be heard.

If your SG filter is equipped with the Filtron 1-10 flush controller, see its User Manual enclosed with it.

MAINTENANCE

Paint retouching on the filter body



WARNING

If the protective coating (inside and outside) of the filter body is damaged and the bare metal is exposed, it will rust in contact with irrigation water and chemicals. If neglected, this will lead to a leak.

Any damage to the protective coating of the filter body must be repaired as soon as possible.

Use Interseal® 670HS Surface Tolerant Epoxy protective paint, color: RAL 5010.

1. Sand the damaged area or spot with sandpaper and clean it with a wire brush.
2. Apply the protective paint.
3. Let the paint completely dry for at least 24 hours before exposing the mended spot to water.

For further assistance, contact your local Netafim™ representative.

Algae growth control



WARNING

Sodium hypochlorite (NaClO) is dangerous toxic and corrosive chemicals. All application regulations and safety rules must be observed. Store and handle according to safety regulations.

Before handling **sodium hypochlorite (NaClO)**, carefully read all the specific safety, health protection and first aid information and instructions. **Be sure you have all required first aid at the site, as instructed.**

Concentrated liquid sodium hypochlorite (NaClO) can damage exposed metal (especially threads that are exposed to water). Be careful when applying them and avoid the spillage of any of the liquid onto exposed metal parts. Should any of the liquid come into contact with metal parts, immediately wash thoroughly with fresh water.

1. Prepare a 15% sodium hypochlorite solution in an acid resistant container able to contain the filter screen assembly.
2. Remove the gaskets from the screen assembly.
2. Dip the filter screen assembly in the solution for 30 minutes (it should be completely submerged in the solution).
3. Rinse the filter screen assembly with fresh water.

For further assistance, contact your Netafim™ local representative.

MAINTENANCE

Winterization

Filter operation should be suspended in climates where the filter is exposed to freezing temperatures.

At the end of the irrigation season

- Close the downstream isolation valve and perform 3 manual flushes.
(To initiate a manual flush hold the MANUAL button on the flush controller pressed for 5 seconds or use the START command in the application.)
- Turn the pump off.
- Close the inlet valve to the filter and release the pressure.
- Drain the filter.
- Disconnect all command tubes from the valves and flush controller. Drain them of water and re-connect (Mind the command tube connection scheme, [page 12](#)).
- Visually inspect the filter's body coating for damage. Repair if necessary
(see [Paint retouching on the filter body](#), page 28).

At the beginning of the next irrigation season

See [First Operation](#), page 18.

TROUBLESHOOTING

General malfunctions

| Problem | Possible causes | Solution |
|---|---|---|
| No water pressure or too low water pressure at the field valve/s. | <ul style="list-style-type: none"> ■ Pump malfunction. ■ PSV/PRV malfunction. ■ Pipe breach. ■ The filter is heavily clogged. | <p>Check the pump, the PSV/PRV and the mainline pipe upstream from the filter.</p> <p>If found in working order: check the filter outlet and inlet pressures.</p> <p>If the pressure differential is higher than 0.5 bar (7 PSI):</p> <ol style="list-style-type: none"> 1. Close the filter's downstream (outlet) valve. 2. Immediately perform 3 consecutive manual flushing cycle (To initiate a manual flush hold the MANUAL button on the flush controller pressed for 5 seconds or use the START command in the application.) Make sure that during the flushing cycle the pressure does not drop below 2.0 bar (30 PSI). 3. Open the downstream valve. <p>If normal functioning is not restored, perform Screen assembly cleaning (see page 26).</p> |
| Filter flushing occurs at a much higher frequency than usual. | <ul style="list-style-type: none"> ■ Degraded water quality ■ Seasonal algae growth. ■ Too low inlet pressure. ■ The filter is heavily clogged. ■ Restriction on the flush line. | <ul style="list-style-type: none"> ■ If water quality problems and algae presence have been dismissed, check the filter inlet pressure. <p>If it is in range:</p> <ol style="list-style-type: none"> 1. Close the filter's downstream (outlet) valve. 2. Immediately perform 3 consecutive manual flushing cycle (To initiate a manual flush hold the MANUAL button on the flush controller pressed for 5 seconds or use the START command in the application.) If normal functioning is not restored, perform Screen assembly cleaning (see page 26). |
| Filter PD > 0.5bar | <ul style="list-style-type: none"> ■ Controller is not working. ■ Control valve is not working. ■ PD sensor is not working. | <ol style="list-style-type: none"> 1. Make sure the controller is in working order by initiating a manual flushing cycle (To initiate a manual flush hold the MANUAL button on the flush controller pressed for 5 seconds or use the START command in the application). If it does not work, replace the batteries (see page 27). If it still does not work, consult your Netafim™ local representative. 2. Operate the Aquative manually (see page 18). If not working, perform Screen assembly cleaning (see page 26). If working, replace the Aquative (see page 34). 3. Compare PD in the application to actual PD. If inconsistent, perform callibration (see page 22). If the problem persists, replace the PD sensor (see page 35). |

Operation

The following pages present all the technical processes needed to address any of the above malfunctions.



WARNING

Do not attempt any dismantling of the filter beyond the processes described in this chapter.

For further assistance contact your Netafim™ local representative.

TROUBLESHOOTING


Filter body opening and Screen assembly extraction

Disassembly:


1. Unscrew nuts (A) with a 17mm wrench
2. Remove washers (B)
3. Remove Piston Cover Assembly (C) and gasket (D)
4. Pull out suction assembly (E)
5. Pull out screen assembly (F).

Assembly:

1. Lubricate screen assembly O-rings (H).
2. Insert screen assembly (F) and push all the way.
3. Insert suction assembly (E) and push all the way.
Make sure suction assembly (E) is aligned and positioned inside the socket of the screen assembly (F), and that the main shaft (G) is lodged inside the bottom bearing.
4. Manually rotate the turbine (I). It should rotate freely.
5. Make sure gasket (D) is in place.
6. Put Piston Cover Assembly (C) in place.
7. Place washers (B) and nuts (A) and tighten the nuts.

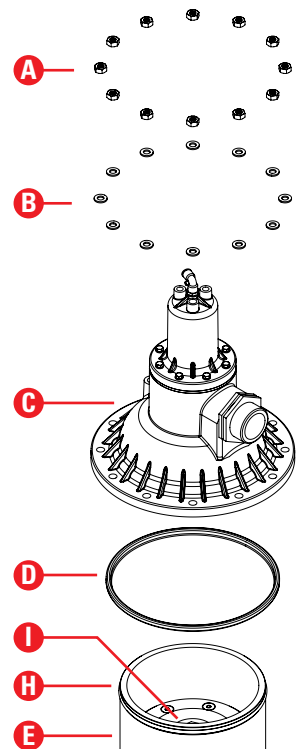

Flushing-nozzle replacement

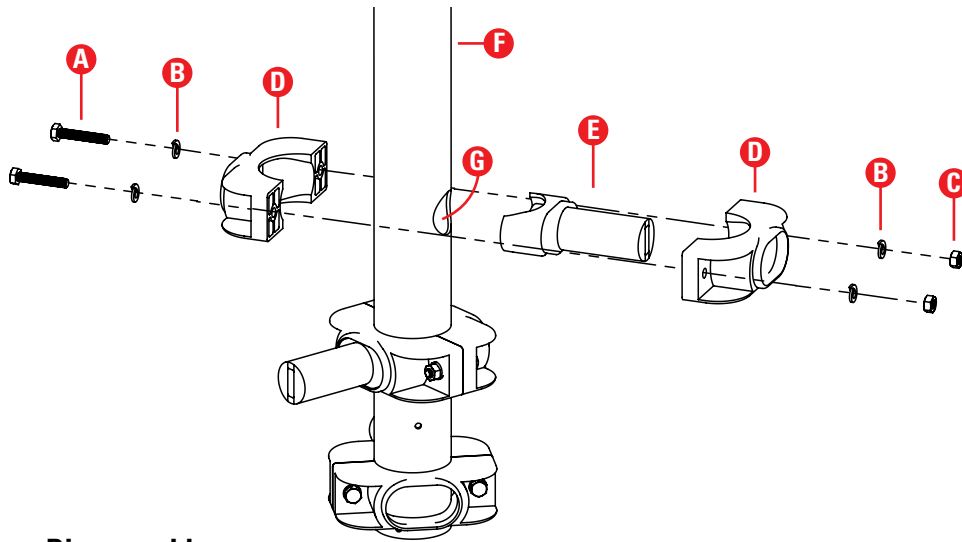


Disassembly:

1. Unscrew 2 screws (A) with a 10mm wrench.
2. Disconnect the nozzle clamp set from the collector pipe (F).

Assembly:

1. Insert the flushing nozzle (E) into one of the clamps (D).
2. Place the two joined parts (D and E) against the hole (G).
3. Place the second clamp (D) opposite the first one, clenching the collector pipe (F).
4. Place a spring washer (B) on each screw (A) and insert through the 2 clamps (D).
5. Place a spring washer (B) and a nut (C) on the other end of each screw (A).
6. Hand-tighten the 2 nuts (C) with a 10mm wrench - do not use electric or impact tools.

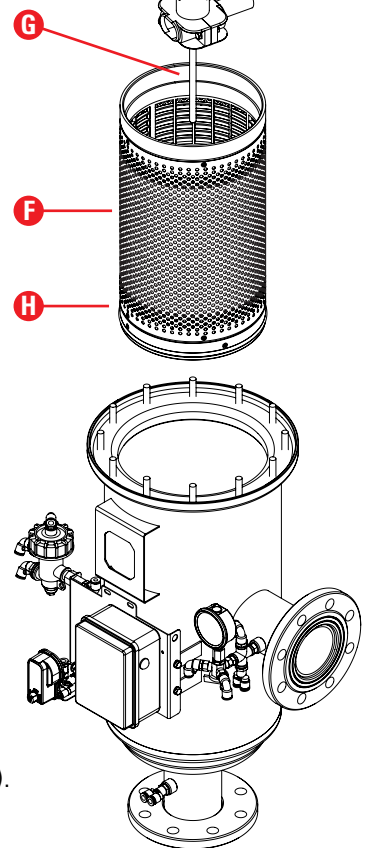

TROUBLESHOOTING


Piston-gasket replacement

Disassembly:

1. Remove 8 screws (A) with a 10mm wrench
2. Remove washers (B)
3. Pull piston cylinder (C)
4. Remove gasket (D)

Assembly:

1. Place gasket (D) inside piston cylinder (C)
(Mind gasket orientation, flat side up)
2. Place piston cylinder (C) on piston cap (E)
3. place washers (B) and hand-tighten screws (A)

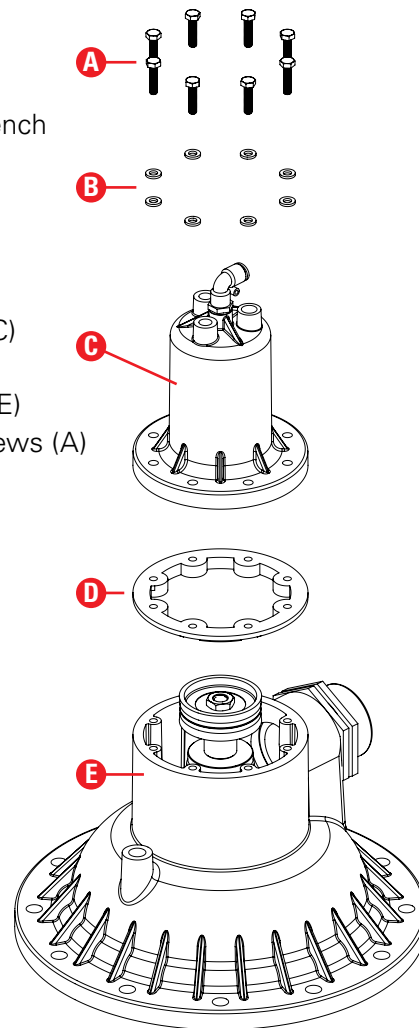


Piston Seal replacement

Disassembly:

1. Release nut (A) while holding nut (B) with a 19mm wrenches.
 - If nut (A) is released: Remove the piston seal (H).
 - If nut (B) is released:
 - Remove washers (C) and plastic spacer (D).
Under the plastic spacer (D) you will find a recess (E) on the rod (F).
 - Hold this recess (E) to prevent rotation of the rod (F) and release nut (A) with a 19mm wrenches.
Do not extract the rod (F) from the piston cover (G).
 - Remove the piston seal (H).
 - Put the plastic spacer (D), washers (C) and nut (B) back in place.

Assembly:

1. Place a new piston seal (H).
2. Hold nut (B) to prevent rotation of the rod (F) and tighten nut (A) with a 19mm wrenches.
4. Apply grease to the piston seal (H).

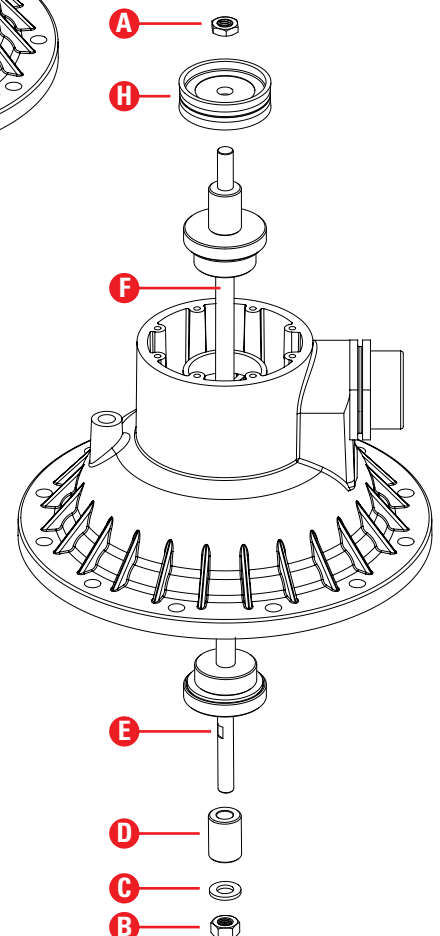

TROUBLESHOOTING


Turbine Brass Bearing replacement

Disassembly:

1. Remove the turbine brass bearing (A) from the turbine set (B) with a 32mm wrench.

Assembly:

1. Place a new turbine brass bearing in its stead. Hand tighten properly.

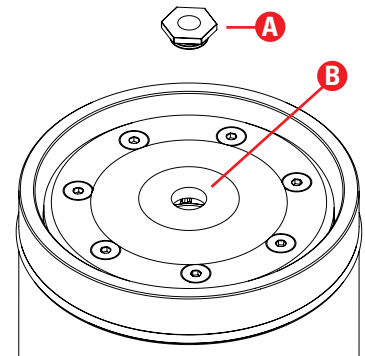


Coarse Screen with Bearing replacement

Disassembly:


1. Manually unscrew 4 screws (A) with a crosshead screwdriver.
2. Pull the Plastic Coarse Screen with Bearing (B) from the screen assembly (C).

Assembly:

1. Insert a new Plastic Coarse Screen with Bearing (B) into the screen assembly (C). Mind correct orientation:

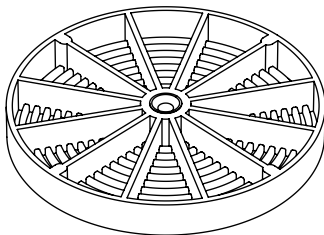

This side facing inside the screen assembly.

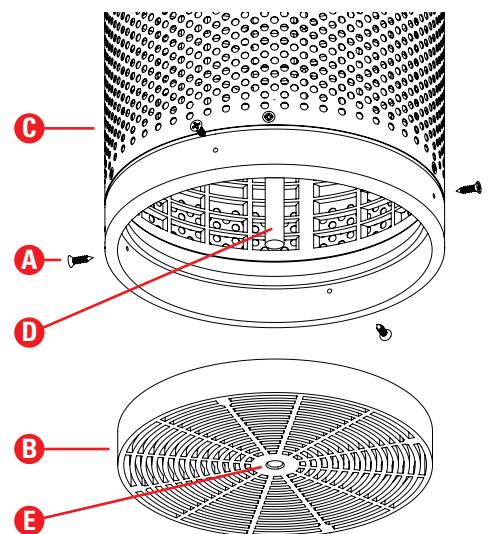

Make sure the Suction Assembly Shaft (D) is aligned and properly inserted into the Bearing (E).

2. Manually rotate the Suction Assembly. It should rotate freely.


Control tube fast connector

Connection:

1. Make sure the tip of the tube is cut neatly and straight.
2. Simply insert the tube all the way into the fast connector.
3. Slightly pull the tube back to make sure it is properly inserted.

Disconnection:

1. Push back and hold the blue locking ring (A) and pull the tube out of the fast connector.

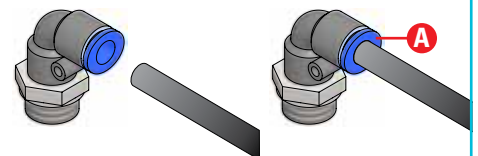

TROUBLESHOOTING



Aquative solenoid replacement

Disassembly:

1. Open the flush controller box using a cross-head screwdriver.
2. Extract one battery to deactivate the controller during the procedure.
3. Take the battery compartment out.
4. Disconnect the solenoid wires from the terminal block.
5. Loosen the cable gland nut by hand.
6. Gently pull the solenoid wires through the cable gland.
7. Disconnect the control tubes from the 3 fast connectors (A).
8. Manually unscrew 2 screws (B) with a crosshead screwdriver.
9. Release the Aquative solenoid (C) from the Controller Support Bracket (D).
10. Disconnect the 3 fast connectors (A) from the Aquative solenoid (C) with a 14mm wrench.

Assembly:

1. Connect the 3 fast connectors (A) to the new Aquative solenoid (C) with a 14mm wrench.
2. Place the Aquative solenoid (C) on Controller Support Bracket (D).
3. Manually fasten 2 screws (B) with a crosshead screwdriver.
4. Gently thread the solenoid wires through the cable gland.
5. Connect the solenoid wires to the terminal block (mind polarity).
6. Refasten the cable gland nut by hand.
7. Connect the control tubes to the 3 fast connectors (A).
(Mind proper location, see control-tube connection scheme, [page 12.](#))
8. Put the battery compartment back in place
(make sure that the solenoid wires pass under the battery compartment in a tidy manner).
9. Put the extracted battery back in place to reactivate the controller.
10. Close the flush controller box (mind the alignment of the cover gasket to ensure sealing).

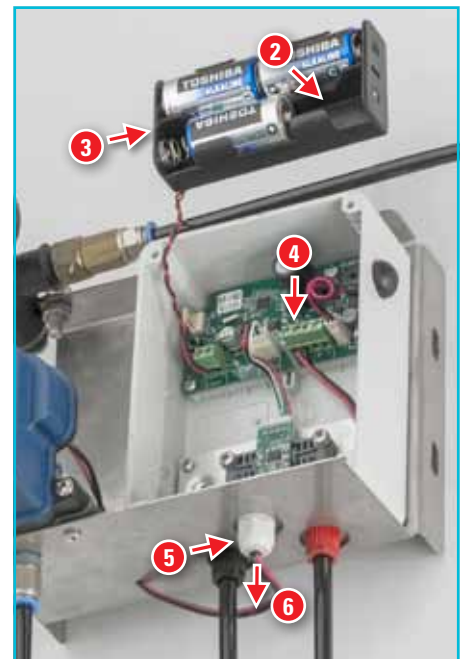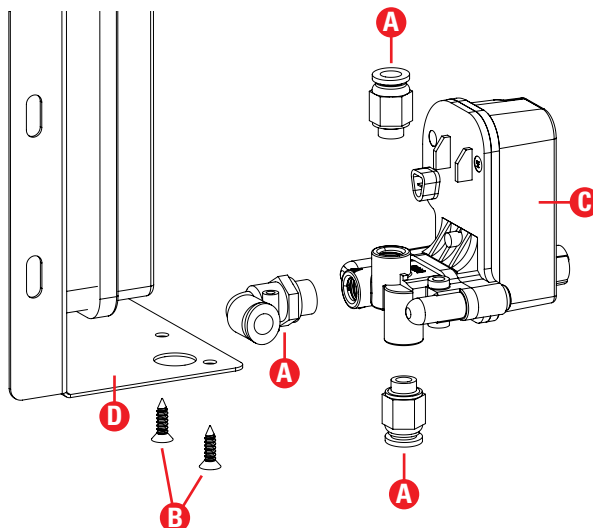

If your SG filter is equipped with the Filtron 1-10 flush controller, see its User Manual enclosed with it.


TROUBLESHOOTING

PD sensor unit replacement


1. Open the flush controller box using a cross-head screwdriver.



2. Extract one battery to deactivate the controller during the procedure.
3. Take the battery compartment out to allow access to the PD sensor unit.
4. Disconnect the PD sensor from the terminal block.
5. Release the 2 control tube nuts by hand.

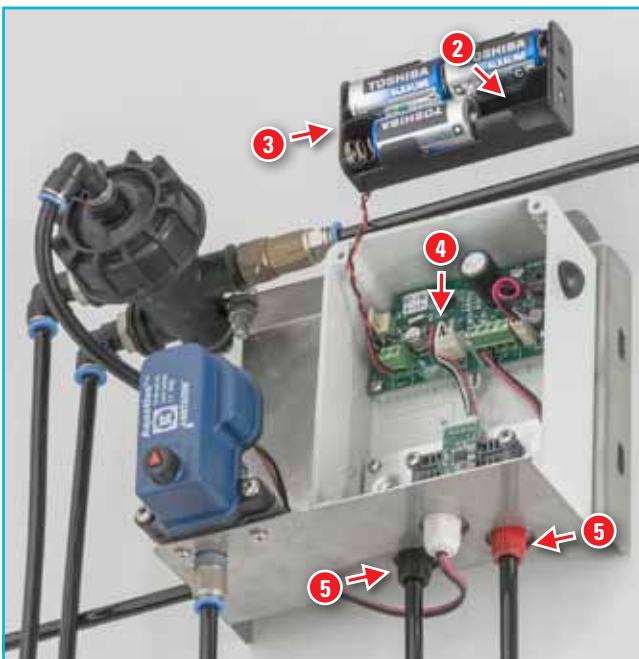

6. Disconnect the 2 control tubes.

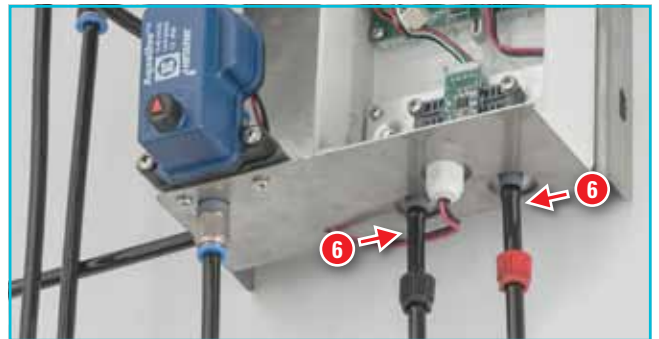

7. Release the PD sensor unit 2 screws using a cross-head screwdriver (mind the washers).
8. Remove the PD sensor.




Continued on the next page

If your SG filter is equipped with the Filtron 1-10 flush controller, see its User Manual enclosed with it.

TROUBLESHOOTING


Replacing the analog PD sensor unit (cont'd)

9. Put the new PD sensor unit in place.

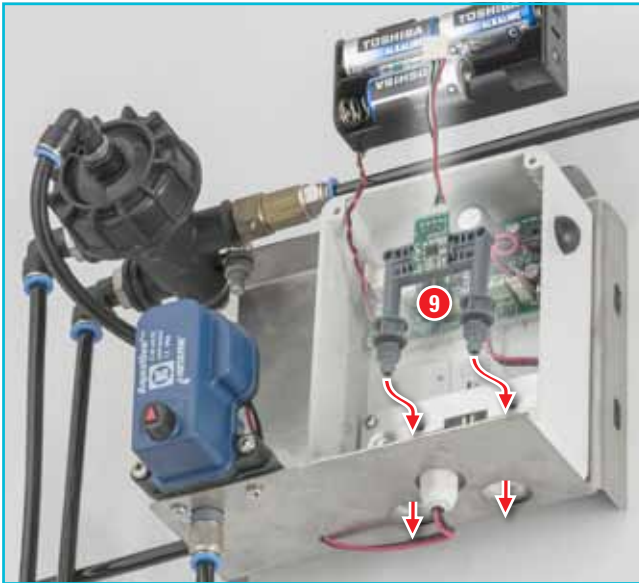

10. Refasten the PD sensor unit 2 screws (mind the washers).


11. Connect the PD sensor to the terminal block.

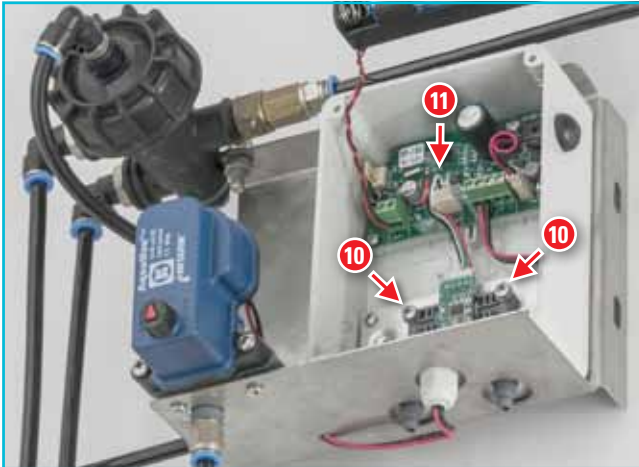

12. Reconnect the 2 control tubes:
Left = low pressure (black nut),
Right = high pressure (red nut).




13. Refasten the 2 control tube nuts by hand.

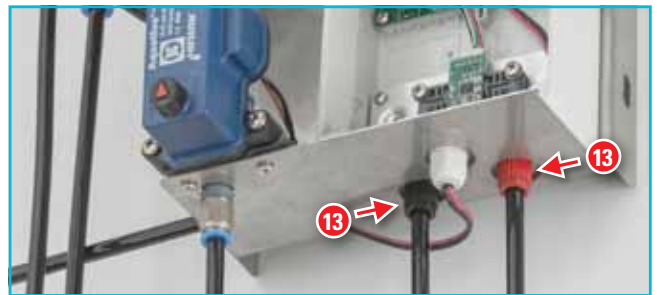

14. Put the battery compartment back in place.

15. Put the extracted battery back in place to reactivate the controller.

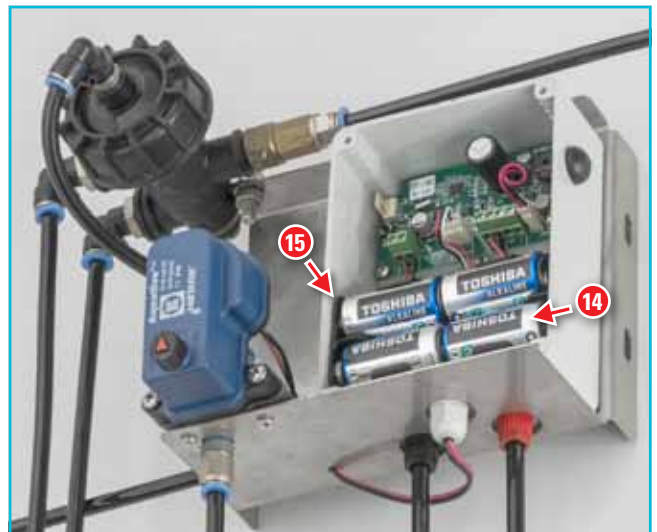

16. Close the flush controller box (mind the alignment of the cover gasket to ensure sealing).



REPLACEMENT PARTS

Filters

SG A V 2" 1350 DC

| Filtration grade (micron) | Cat. No. | |
|---------------------------|--------------|--------------|
| | BSP | NPT |
| 100 µm | 71960-000099 | 71960-000102 |
| 130 µm | 71960-000100 | 71960-000103 |
| 200 µm | 71960-000101 | 71960-000104 |
| 300 µm | Upon request | Upon request |
| 500 µm | 71960-000680 | Upon request |



NOTE

- All filter models are available with 100, 130, 200, 300 or 500 micron (150, 115, 80, 50 or 35 mesh) filtration grade. (Other filtration grades are available upon request).
- All filters with DC controller and DC solenoid.

SG A V 3" 1350 DC

| Filtration grade (micron) | Cat. No. | | | | |
|---------------------------|--------------|--------------|--------------|--------------|--------------|
| | BSP | NPT | ANSI | BSTD | DIN |
| 100 µm | 71960-000119 | 71960-000122 | 71960-000125 | 71960-000128 | 71960-000149 |
| 130 µm | 71960-000120 | 71960-000123 | 71960-000126 | 71960-000129 | 71960-000150 |
| 200 µm | 71960-000121 | 71960-000124 | 71960-000127 | 71960-000130 | 71960-000151 |
| 300 µm | Upon request | Upon request | Upon request | Upon request | Upon request |
| 500 µm | Upon request | Upon request | Upon request | Upon request | 71960-000681 |

SG A V 3" S 2000 DC

| Filtration grade (micron) | Cat. No. | | | | |
|---------------------------|--------------|--------------|--------------|--------------|--------------|
| | BSP | NPT | ANSI | BSTD | DIN |
| 100 µm | 71960-000169 | 71960-000172 | 71960-000175 | 71960-000199 | 71960-000219 |
| 130 µm | 71960-000170 | 71960-000173 | 71960-000176 | 71960-000200 | 71960-000220 |
| 200 µm | 71960-000171 | 71960-000174 | 71960-000177 | 71960-000201 | 71960-000221 |
| 300 µm | Upon request | Upon request | Upon request | Upon request | Upon request |
| 500 µm | Upon request | Upon request | Upon request | Upon request | 71960-000690 |

SG A V 4" 2000 DC


| Filtration grade (micron) | Cat. No. | | |
|---------------------------|--------------|--------------|--------------|
| | ANSI | BSTD | DIN |
| 100 µm | 71960-000222 | 71960-000225 | 71960-000249 |
| 130 µm | 71960-000223 | 71960-000226 | 71960-000250 |
| 200 µm | 71960-000224 | 71960-000227 | 71960-000251 |
| 300 µm | Upon request | Upon request | Upon request |
| 500 µm | Upon request | Upon request | 71960-000691 |

SG A V 4" S 2700 DC

| Filtration grade (micron) | Cat. No. | | |
|---------------------------|--------------|--------------|--------------|
| | ANSI | BSTD | DIN |
| 100 µm | 71960-000603 | 71960-000605 | 71960-000606 |
| 130 µm | 71960-000602 | 71960-000601 | 71960-000600 |
| 200 µm | 71960-000604 | Upon request | 71960-000607 |
| 300 µm | Upon request | Upon request | Upon request |
| 500 µm | Upon request | Upon request | Upon request |

SG A V 6" 2700 DC

| Filtration grade (micron) | Cat. No. | | |
|---------------------------|--------------|--------------|--------------|
| | ANSI | BSTD | DIN |
| 100 µm | 71960-000610 | 71960-000613 | 71960-000620 |
| 130 µm | 71960-000611 | 71960-000614 | 71960-000621 |
| 200 µm | 71960-000612 | 71960-000279 | 71960-000622 |
| 300 µm | Upon request | Upon request | Upon request |
| 500 µm | Upon request | Upon request | Upon request |

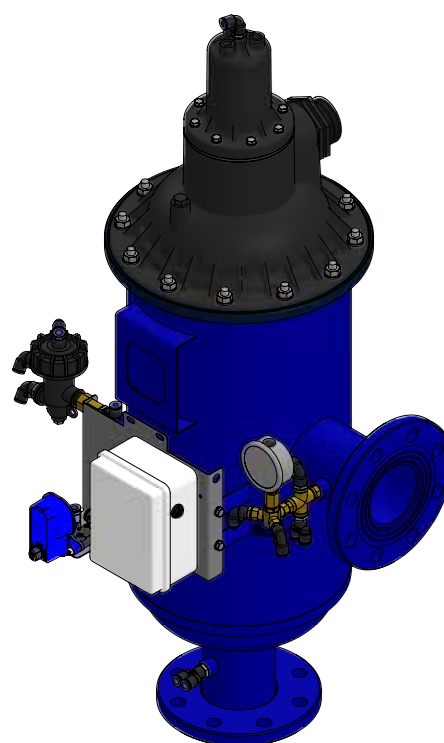

REPLACEMENT PARTS


Spare parts

Main parts and assemblies

| Part | Description | Cat. No. | Qty. | See details on page: |
|------|---|--------------|------|---|
| 1 | Metal Body | | 1 | 38 |
| 2 | Screen Assembly kit | | 1 | 39 |
| 3 | Flush Assembly | | 1 | 39 |
| 4 | Piston Cover Assembly | | 1 | 41 |
| 5 | Electronic Controller Assembly | | 1 | 42 |
| 6 | Pressure Gauge Assembly | | 1 | 43 |
| 7 | Cover Gasket | 71965-000406 | 1 | 44 (Seal Kit) |
| 8 | O-ring | 71965-000407 | 2 | 44 (Seal Kit) |
| 9 | 10mm SS Washer and Nuts - 12 pcs set | 71965-000256 | 1 | 44 (Washers and Nuts set) |
| 10 | Complete O-ring and gasket kit for SG Filters | 71965-000450 | 1 | 44 (Seal Kit) |

Metal Body

| Part | Thread type | Cat. No. | Qty. |
|----------------|-------------|--------------|------|
| SGV 2" | BSPT | 71965-000100 | 1 |
| | NPT | 71965-000101 | 1 |
| SGV 3" | BSPT | 71965-000102 | 1 |
| | NPT | 71965-000103 | 1 |
| | DIN | 71965-000104 | 1 |
| | BSTD | 71965-000105 | 1 |
| | ANSI | 71965-000106 | 1 |
| SGV 3"S | BSPT | 71965-000107 | 1 |
| | NPT | 71965-000108 | 1 |
| | DIN | 71965-000109 | 1 |
| | BSTD | 71965-000110 | 1 |
| | ANSI | 71965-000111 | 1 |
| SGV 4" | DIN | 71965-000112 | 1 |
| | BSTD | 71965-000113 | 1 |
| | ANSI | 71965-000114 | 1 |
| SGV 4"S | DIN | 71965-000150 | 1 |
| | BSTD | 71965-000151 | 1 |
| | ANSI | 71965-000152 | 1 |
| SGV 6" | DIN | 71965-000140 | 1 |
| | BSTD | 71965-000141 | 1 |
| | ANSI | 71965-000142 | 1 |

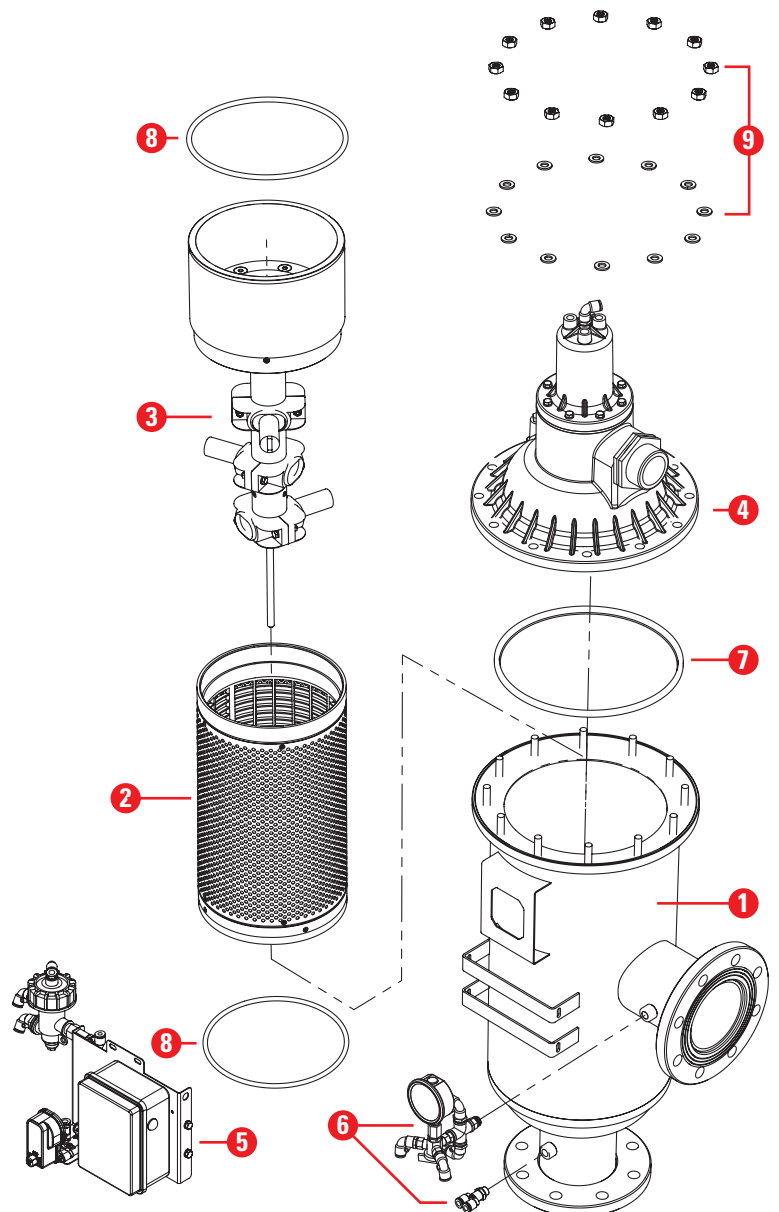


REPLACEMENT PARTS

Screen Assembly

| Part | Filtration grade (micron) | Cat. No. | | | | | | Qty. |
|------|---------------------------|--------------|--------|--------------|--------|--------------|--------|------|
| | | SGV 2" | SGV 3" | SGV 3"S | SGV 4" | SGV 4"S | SGV 6" | |
| 2 | 100 µm | 71965-000200 | | 71965-000203 | | 71965-000210 | | 1 |
| | 130 µm | 71965-000201 | | 71965-000204 | | 71965-000211 | | 1 |
| | 200 µm | 71965-000202 | | 71965-000205 | | 71965-000212 | | 1 |
| | 500 µm | 71965-000213 | | 71965-000214 | | | | 1 |

The Screen Assembly consists of the following parts

| Part | Description | Cat. No. | Qty. |
|------|---|--------------|------|
| 2.1 | Fine Screen | | 1 |
| 2.2 | Plastic Coarse Screen | 71965-000265 | 1 |
| 2.3 | O-ring (See Seal Kit , page 44) | | 1 |
| 2.4 | Countersunk Flat Head Cross Recess Screw | | 4 |

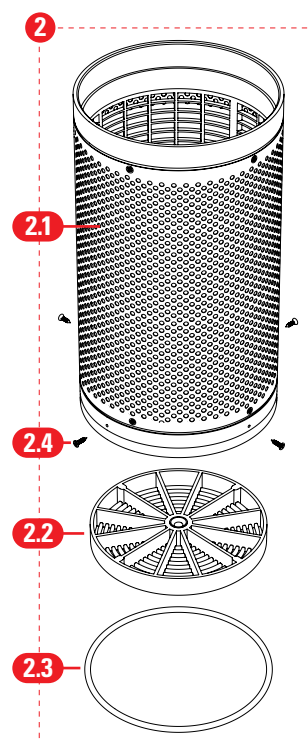

Flush Assembly

| Part | Description | Cat. No. | | | | | | Qty. |
|------|----------------|--------------|--------|--------------|--------|--------------|--------|------|
| | | SGV 2" | SGV 3" | SGV 3"S | SGV 4" | SGV 4"S | SGV 6" | |
| 3 | Flush Assembly | 71965-000250 | | 71965-000262 | | 71965-000249 | | 1 |

The Flush Assembly consists of the following parts

| Part | Description | Qty. |
|------|---|------|
| 3.1 | Turbine Chamber Main Body | 1 |
| 3.2 | O-ring (See Seal Kit , page 44) | 1 |
| 3.3 | Suction Assembly Without Housing (See below) | 1 |

Suction Assembly Without Housing

| Part | Description | Cat. No. | | | | | | Qty. |
|------|----------------------------------|-------------|--------|-------------|--------|--------------|--------|------|
| | | SGV 2" | SGV 3" | SGV 3"S | SGV 4" | SGV 4"S | SGV 6" | |
| 3.3 | Suction Assembly Without Housing | 71965-00264 | | 71965-00263 | | 71965-000248 | | 1 |

The Suction Assembly consists of the following parts

| Part | Description | Cat. No. | Qty. |
|--------|--|--------------|------|
| 3.3.1 | Suction Assembly Center Pipe | | 1 |
| 3.3.2 | Turbine Chamber Partition | | 1 |
| 3.3.3 | Turbine Assembly (See page 40) | | 1 |
| 3.3.4 | Nozzle Assembly (See page 40) | 71965-000412 | 2 |
| 3.3.5 | Center Pipe Top Plug | | 1 |
| 3.3.6 | Center Pipe Shaft | | 1 |
| 3.3.7 | Center Pipe Shaft Connecting Plastic Bolt | | 1 |
| 3.3.8 | Countersunk Flat Head Cross Recess Screw 5x12H A2x70 | | 3 |
| 3.3.9 | Countersunk Flat Head Cross Recess Screw 4x32H A2x70 | | 3 |
| 3.3.10 | Countersunk Flat Head Cross Recess Screw 4.2x16H A2x70 | | 6 |

REPLACEMENT PARTS

Turbine Assembly

| Part | Description | Cat. No. | | | | | | Qty. |
|-------|------------------|--------------|--------|---------|--------|--------------|--------|------|
| | | SGV 2" | SGV 3" | SGV 3"S | SGV 4" | SGV 4"S | SGV 6" | |
| 3.3.3 | Turbine Assembly | 71965-000257 | | | | 71965-000411 | | 1 |

The Turbine Assembly consists of the following parts


| Part | Description | Cat. No. | Qty. |
|---------|-----------------------|-------------|------|
| 3.3.3.1 | Turbine Set | | 1 |
| 3.3.3.2 | Turbine Brass Bearing | 71965-00266 | 1 |

Nozzle Assembly

| Part | Description | Cat. No. | Qty. |
|-------|-----------------|--------------|------|
| 3.3.4 | Nozzle Assembly | 71965-000412 | 1 |

The Nozzle Assembly consists of the following parts

| Part | Description | Qty. |
|---------|-----------------------|------|
| 3.3.4.1 | Nozzle Clamp | 2 |
| 3.3.4.2 | Nozzle Round | 1 |
| 3.3.4.3 | M6x35 HEX Screw A2x70 | 2 |
| 3.3.4.4 | M6 Plain Washer A2x70 | 4 |
| 3.3.4.5 | M6 Hex Nut A2x70 | 2 |

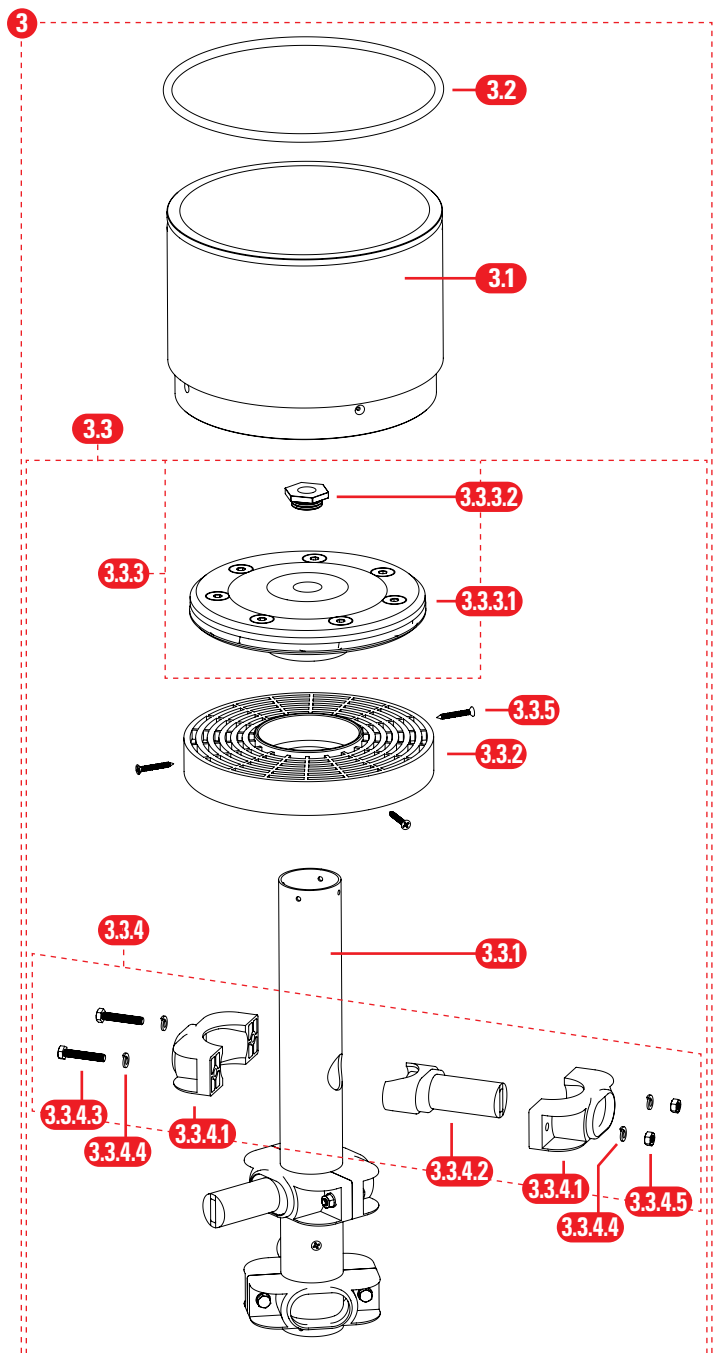


REPLACEMENT PARTS

Piston Cover Assembly

| Part | Description | Cat. No. | | | | | | Qty. |
|------|-----------------------|--------------|--------|---------|--------|--------------|--------|------|
| | | SGV 2" | SGV 3" | SGV 3"S | SGV 4" | SGV 4"S | SGV 6" | |
| 4 | Piston Cover Assembly | 71965-000251 | | | | 71965-000402 | | 1 |

The Piston Cover Assembly consists of the following parts

| Part | Description | Qty. |
|------|--|------|
| 4.1 | Piston Cover | 1 |
| 4.2 | Piston Cylinder | 1 |
| 4.3 | Cylinder Gasket (See Seal Kit , page 44) | 1 |
| 4.4 | Rod Assembly (See below) | 1 |
| 4.5 | Cover Gasket (See Seal Kit , page 44) | 1 |
| 4.6 | M6 Bolts and Washer Kit (See below) | 1 |
| 4.7 | Plug in Metal Connector 90 deg 8mm X 1/8" | 1 |
| 4.8 | Plastic Nipple 63x2" | 1 |

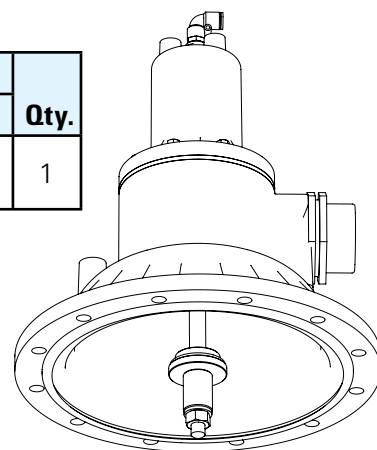

Rod Assembly

| Part | Description | Cat. No. | | | | | | Qty. |
|------|--------------|--------------|--------|---------|--------|--------------|--------|------|
| | | SGV 2" | SGV 3" | SGV 3"S | SGV 4" | SGV 4"S | SGV 6" | |
| 4.4 | Rod Assembly | 71965-000259 | | | | 71965-000413 | | 1 |

The Rod Assembly consists of the following parts


| Part | Description | Qty. |
|-------|------------------------|------|
| 4.4.1 | Rod | 1 |
| 4.4.2 | Plastic Spacer | 2 |
| 4.4.3 | Seal Disc | 2 |
| 4.4.4 | Brass Disk Seat | 2 |
| 4.4.5 | Plastic Disc | 2 |
| 4.4.6 | Piston Seal | 1 |
| 4.4.7 | M12 Half Hex Nut A2x35 | 1 |
| 4.4.8 | M12 Plain Washer A2x70 | 1 |
| 4.4.9 | M12 Hex Nut A2x70 | 1 |

M6 Bolts and Washer Kit

| Part | Description | Cat. No. | Qty. |
|------|-------------------------|--------------|------|
| 4.6 | M6 Bolts and Washer Kit | 71965-000260 | 1 |

The Bolts and Washer Kit consists of the following parts

| Part | Description | Qty. |
|-------|-----------------------|------|
| 4.6.1 | M6 Plain Washer A2x70 | 8 |
| 4.6.2 | M6x25 Hex Screw A2x70 | 8 |

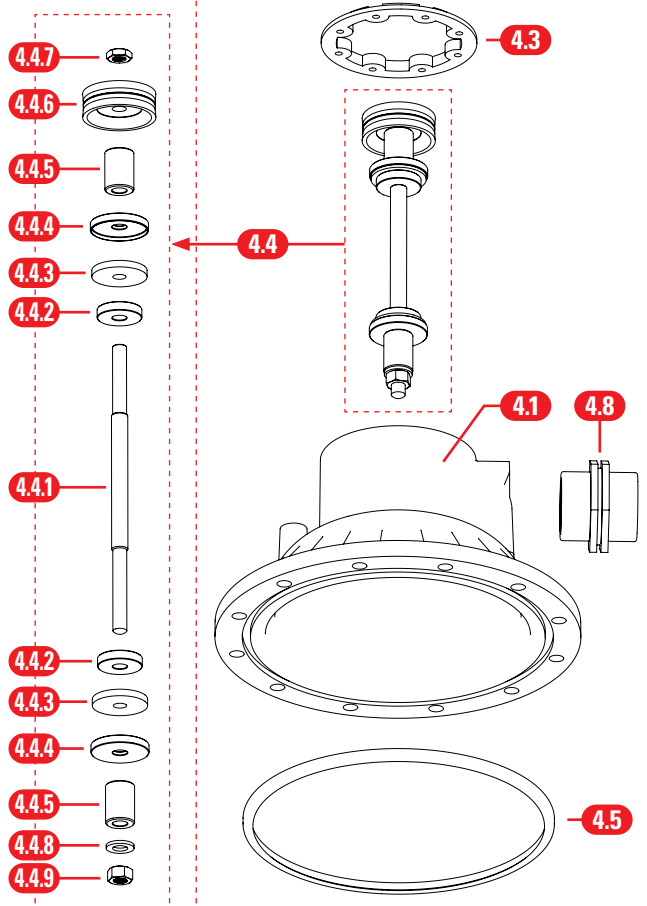


REPLACEMENT PARTS

Electronic Controller Assembly

| Part | Description | Cat. No. | | | | | | Qty. |
|------|--------------------------------|--------------|--------|---------|--------|--------------|--------|------|
| | | SGV 2" | SGV 3" | SGV 3"S | SGV 4" | SGV 4"S | SGV 6" | |
| 5 | Electronic Controller Assembly | 71965-000520 | | | | 71965-000510 | | 1 |

The Electronic Controller Assembly consists of the following parts

| Part | Description | Cat. No. | Qty. |
|------|---|--------------|------|
| 5.1 | Aquative DC Assembly (See page 43) | 71965-000261 | 1 |
| 5.2 | Electronic Controller Box SG Plus | 74310-000006 | 1 |
| 5.3 | Controller Support Bracket SS | | 1 |
| 5.4 | Hydraulic Relay Assembly (See page 43) | | 1 |

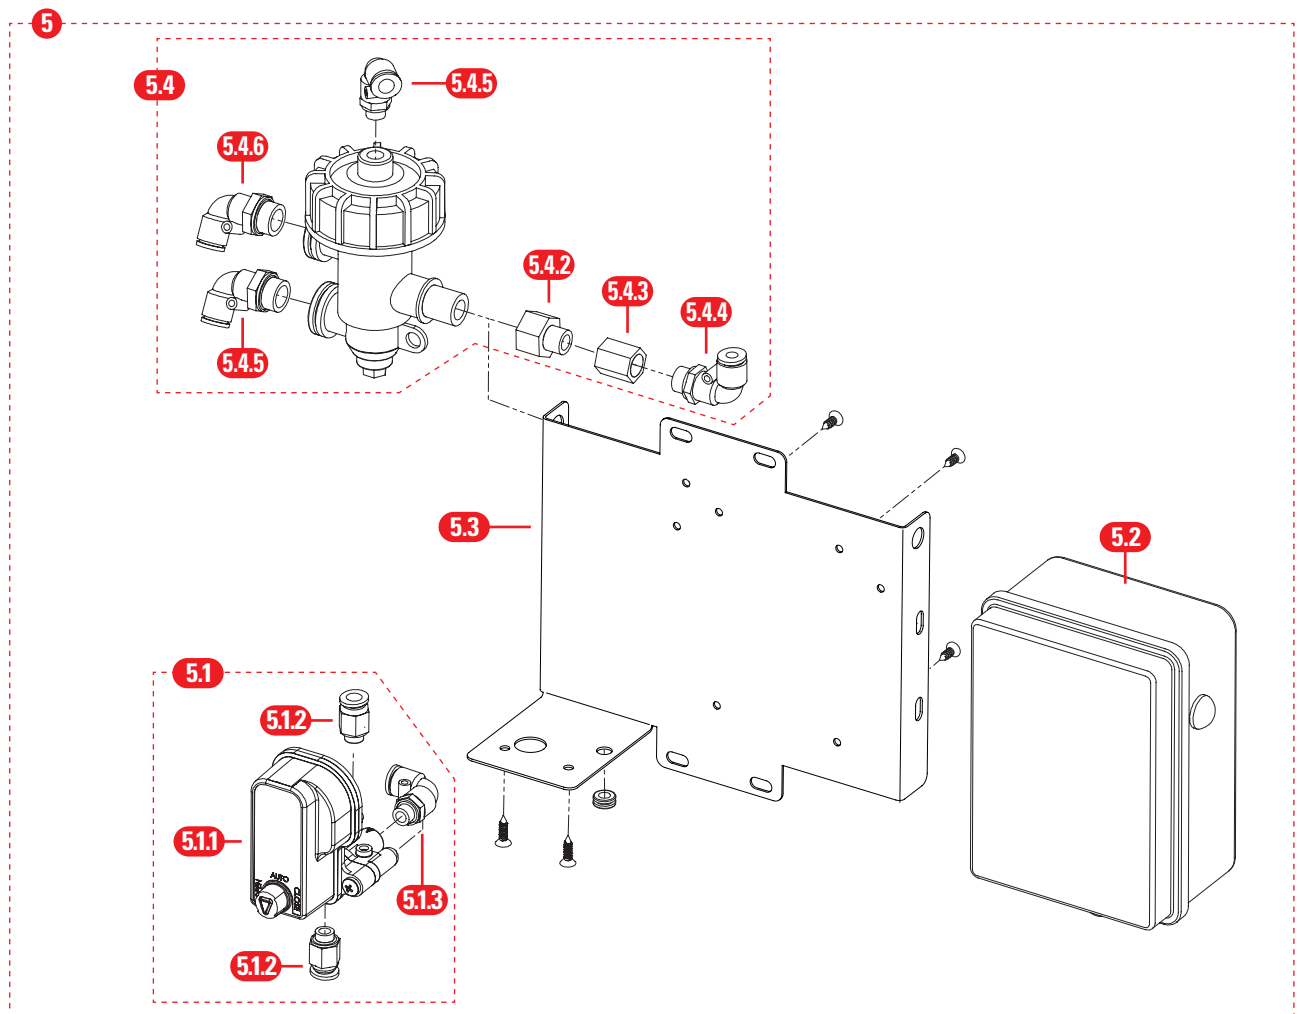

REPLACEMENT PARTS

Aquative DC Assembly

| Part | Description | Cat. No. | Qty. |
|------|----------------------|--------------|-------|
| 5.1 | Aquative DC Assembly | 71965-000261 | 1 set |

The Aquative DC Assembly consists of the following parts

| Part | Description | Cat. No. | Qty. |
|-------|---|--------------|------|
| 5.1.1 | Aquative DC | 35500-001900 | 1 |
| 5.1.2 | Plug in Metal Connector 8mm X 1/8" | | 2 |
| 5.1.3 | Plug in Metal Connector 90 deg 8mm X 1/8" | | 1 |

Hydraulic Relay Assembly

| Part | Description | Cat. No. | | | | | | Qty. |
|------|--------------------------|--------------|--------|---------|--------|--------------|--------|------|
| | | SGV 2" | SGV 3" | SGV 3"S | SGV 4" | SGV 4"S | SGV 6" | |
| 5.4 | Hydraulic Relay Assembly | 71965-000530 | | | | 71965-000414 | | 1 |

The Hydraulic Relay Assembly consists of the following parts

| Part | Description | Cat. No. | Qty. |
|-------|---|--------------|------|
| 5.4.1 | SG Hydraulic Relay | 71680-000800 | 1 |
| 5.4.2 | Brass Connector Adaptor 3/8" X 1/4" D-E | | 1 |
| 5.4.3 | Brass Connector 1/4" X 1/4" F-F | | 1 |
| 5.4.4 | Plug in Plastic Connector 8mm X 1/4" | | 1 |
| 5.4.5 | Plug in Plastic Connector 90 deg 8mm X 3/8" | | 2 |
| 5.4.6 | Plug in Plastic Connector 90 deg 6mm X 3/8" | | 1 |


Pressure Gauge Assembly

| Part | Description | Cat. No. | | | | | | Qty. |
|------|-------------------------|--------------|--------|---------|--------|--------------|--------|------|
| | | SGV 2" | SGV 3" | SGV 3"S | SGV 4" | SGV 4"S | SGV 6" | |
| 6 | Pressure Gauge Assembly | 71965-000531 | | | | 71965-000405 | | 1 |

The Pressure Gauge Assembly consists of the following parts

| Part | Description | Cat. No. | Qty. |
|------|--|--------------|------|
| 6.1 | Three Way Valve 3 x 1/8" | | 1 |
| 6.2 | Plug in Plastic Connector 90 deg 8mm X 1/8" | | 2 |
| 6.3 | Plug in Plastic Connector 90 deg 6mm X 1/4" | | 1 |
| 6.4 | Pressure Gauge 10Bar 1/4" BSP | 77456-000153 | 1 |
| 6.5 | Brass Connector Adaptor 1/4" X 1/8" M-M | | 1 |
| 6.6 | Brass Connector Cross 1/4" | | 1 |
| 6.7 | Brass Connector 1/4" X 1/4" M-M | | 1 |
| 6.8 | Brass Connector 1/4" X 1/4" F-F | | 1 |
| 6.9 | Plug in Plastic Double Connector 8 mm X 1/4" | | 1 |

REPLACEMENT PARTS

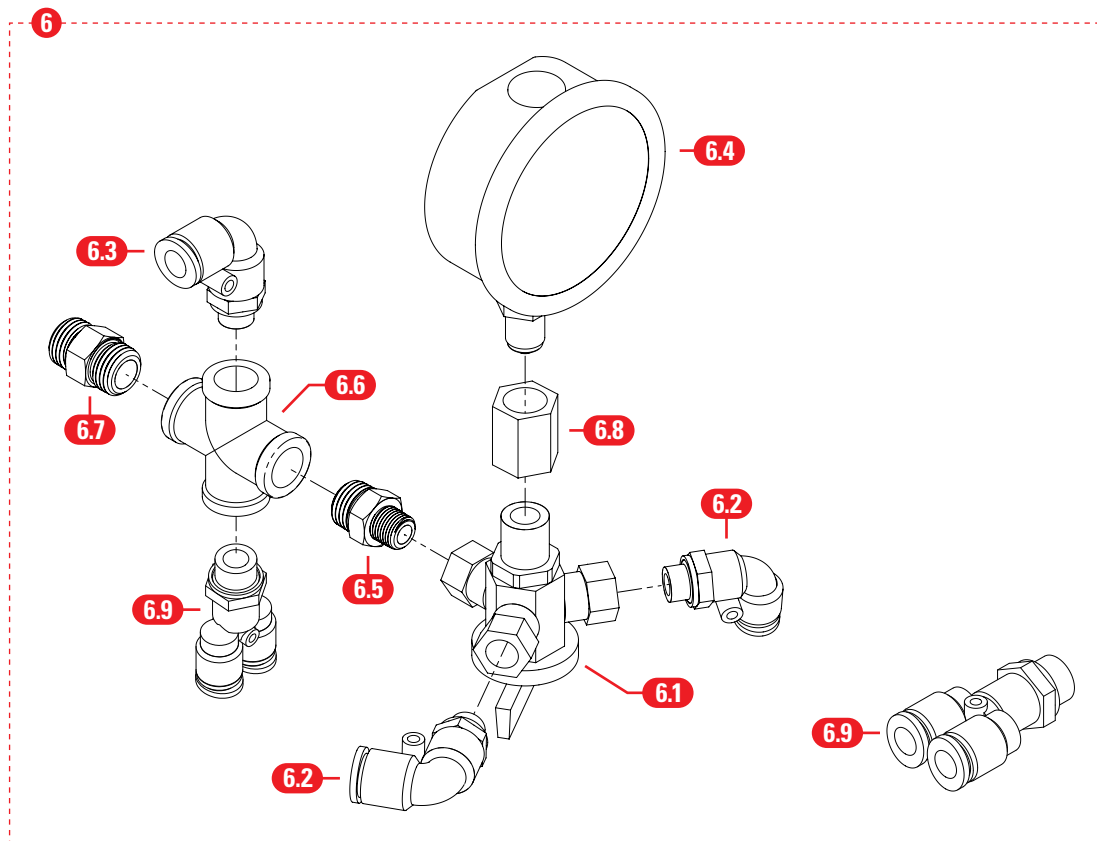

Washers and Nuts set

| Part | Description | Cat. No. | Qty. |
|------|---------------------------------|--------------|------|
| 9 | 10mm SS Washer and Nuts, 12 pcs | 71965-000256 | 1 |

The Washers and Nuts set consists of the following parts

| Part | Description | Qty. |
|------|------------------------|------|
| 9.1 | M10 Plain Washer A2x70 | 12 |
| 9.2 | M10 Hex Nut A2x70 | 12 |

O-ring and gasket kit

| Part | Description | Cat. No. | Qty. |
|------|--------------------------------------|--------------|------|
| 10 | O-ring and gasket kit for SG filters | 71965-000450 | 1 |

The Kit consists of the following parts

| Part | Description | Qty. |
|------|-----------------|------|
| 5.3 | Cylinder Gasket | 1 |
| 10.1 | Cover Gasket | 2 |
| 10.2 | O-ring | 2 |

Seal Kit

| Part | Description | Cat. No. | Qty. |
|------|------------------------------|--------------|------|
| 11 | Seal kit for SGV Filters Rod | 71965-000023 | 1 |

The Kit consists of the following parts

| Part | Description | Qty. |
|------|-------------|------|
| 11.1 | Seal Disc | 2 |
| 11.2 | Piston Seal | 1 |

WARRANTY

Netafim™ warrants the ScreenGuard™ screen filter metal body to be free of corrosion, defects in material and workmanship for 5 (five) years from the date of installation.

Netafim™ warrants the ScreenGuard™ screen filter Piston Assembly and Cover in case of fracture under normal conditions of use, and to be free of defects in material and workmanship and for 5 (five) years from the date of installation.

Netafim™ warrants the ScreenGuard™ screen filter bearings, O-rings and seals for 2 (two) years from the date of installation, under normal conditions of use.

Netafim™ warrants the ScreenGuard™ screen filter consumable components, the SG! controller and the Aquative solenoid for 1 (one) years from the date of installation.

If a defect is discovered during the applicable warranty period, Netafim™ will repair or replace, at its discretion, the product or the defective part.

This warranty does not extend to repairs, adjustments or replacements of a Netafim™ screen filter system or part that results from reasonable wear and tear, misuse, negligence, alteration, force majeure, lightning, power surge, improper installation or improper maintenance.

If a defect arises in your Netafim™ product during the warranty period, contact your local Netafim™ representative.

Limited warranty

This warranty is subject to the conditions in Netafim's official warranty statement.

(For the full text of Netafim's official warranty statement, please contact your local Netafim™ representative).

GROW MORE WITH LESS

WWW.NETAFIM.COM